


AstridDouble Wardrobe

Instructions
Version: R1-0-1

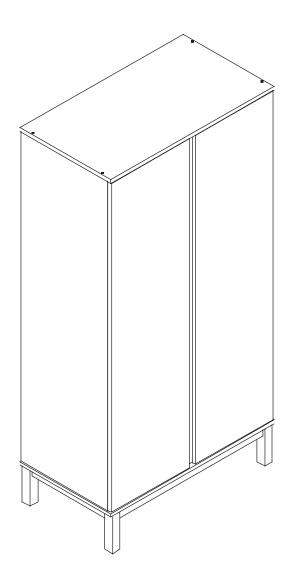

IMPORTANT KEEP FOR FUTURE REFERENCE



Thank you for choosing to be part of the Obaby family

This wardrobe conforms to FIRA/FRQG C001 & C004:2016 To ensure that your wardrobe is used in accordance with these instructions, please read them fully.

Your child's safety may be affected if you do not follow these instructions.

WARNING: Installation shall be carried out exactly according to the manufacturers instructions

otherwise a safety risk can occur if incorrectly installed.

WARNING: Assembly should be carried out by a competent adult only.

WARNING: In order to prevent tipping this product must be used with the wall attachment

devices provided. Serious or fatal crushing injuries can occur from furniture

tipping over.

The wardrobe must be used on a level and stable surface.

- Be aware of the risks of open fires and other sourses of heat, such as electric bar fires, gas fires, etc. in the near vicinity of the wardrobe.
- Do not use the wardrobe if any part is broken or missing. Use only spare parts approved by the manufacturer.
- All assembly fittings should be tightened properly and care should be taken that no screws
 are loose, as a child could trap parts of the body, or clothing (e.g. ribbons, drawstrings,
 necklaces) this could lead to strangulation.
- Regularly check that all the fittings and components of the wardrobe are fully tightened and in working order.
- Wood is a natural material, the colour will darken with age.
- During assembly children should be kept away from the product due to possible risk of injury.
- This product is suitable for children aged 3-12 + years.

To prevent overloading we recommend the following maximum loads:

Shelves: 15kg


Hanging rails: 10kg


• Drawers: 6kg


ROUTINE CARE & MAINTENANCE


- ♦ For cleaning, use only a mild detergent and warm water.
- ♦ DO NOT USE BLEACH.
- ♦ DO NOT USE any abrasive substances.
- ♦ Take care when handling or moving furniture, careless handling can damage wooden furniture.


Due to constant updating and improvements, some components may occasionally differ slightly from the images shown in these instructions. We reserve the rights to change the specifications of any products without prior notice. If you need any assistance please contact your Obaby retailer from whom you purchased your product, who will take appropriate action.

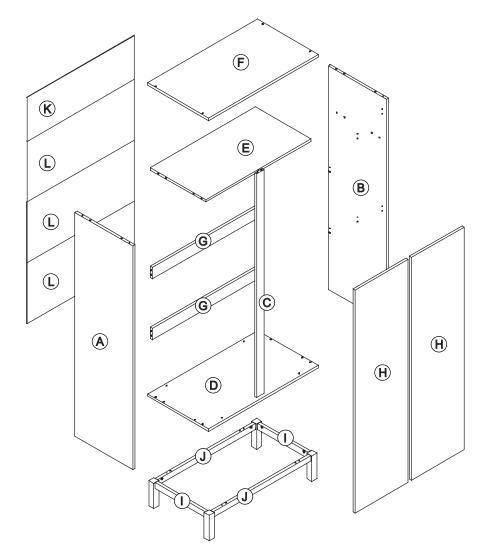


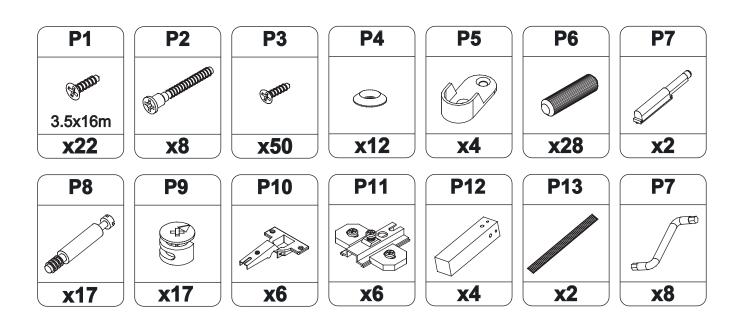


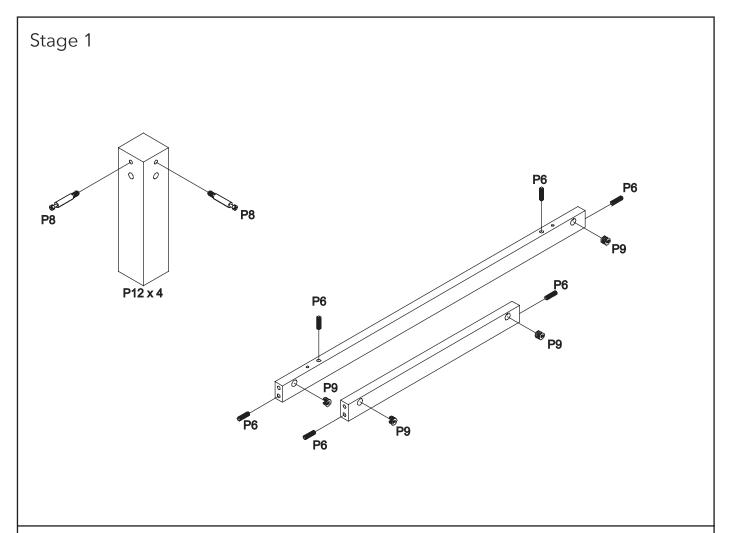

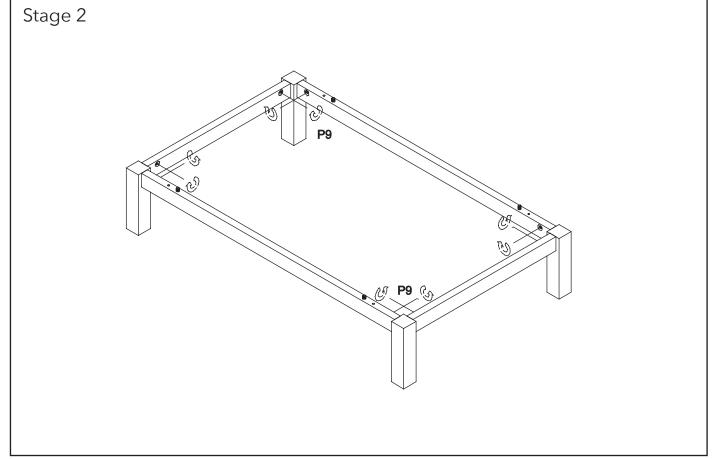

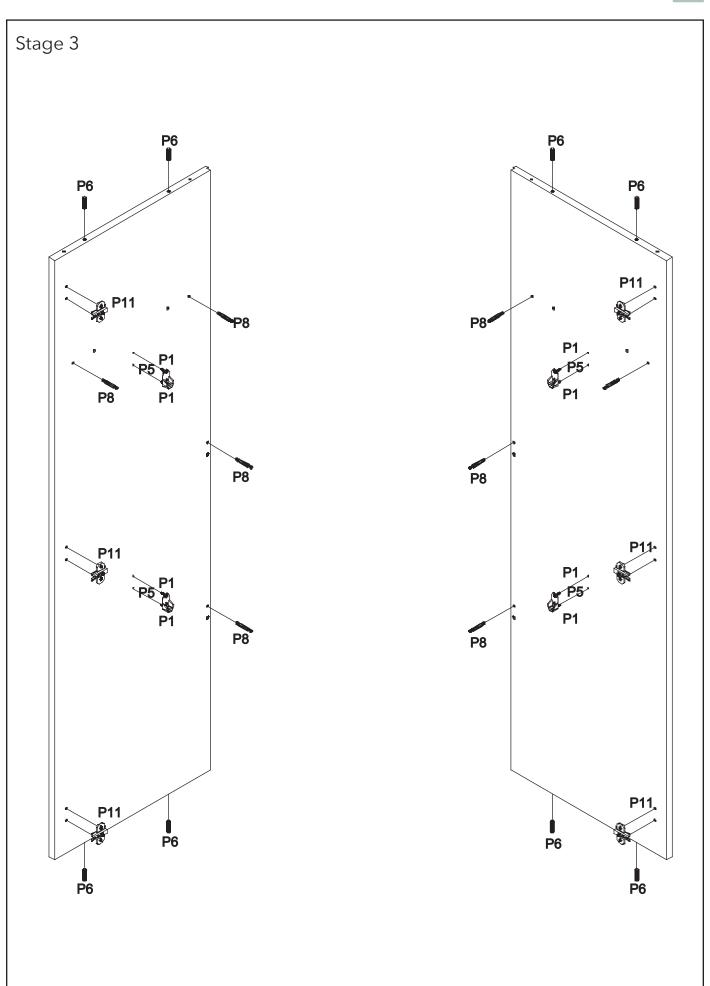

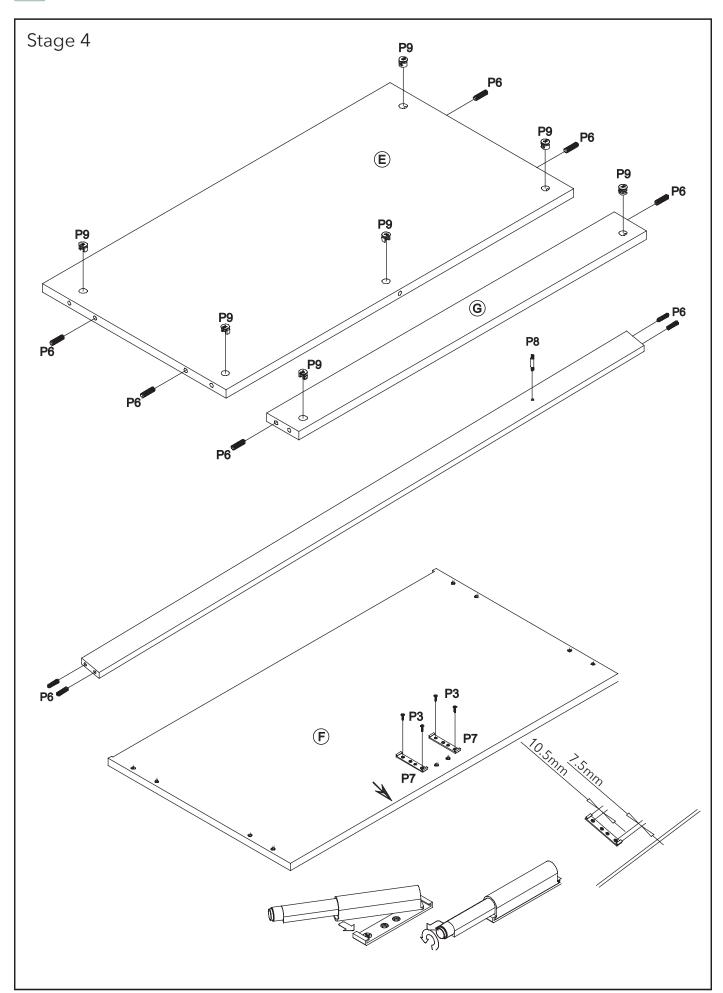


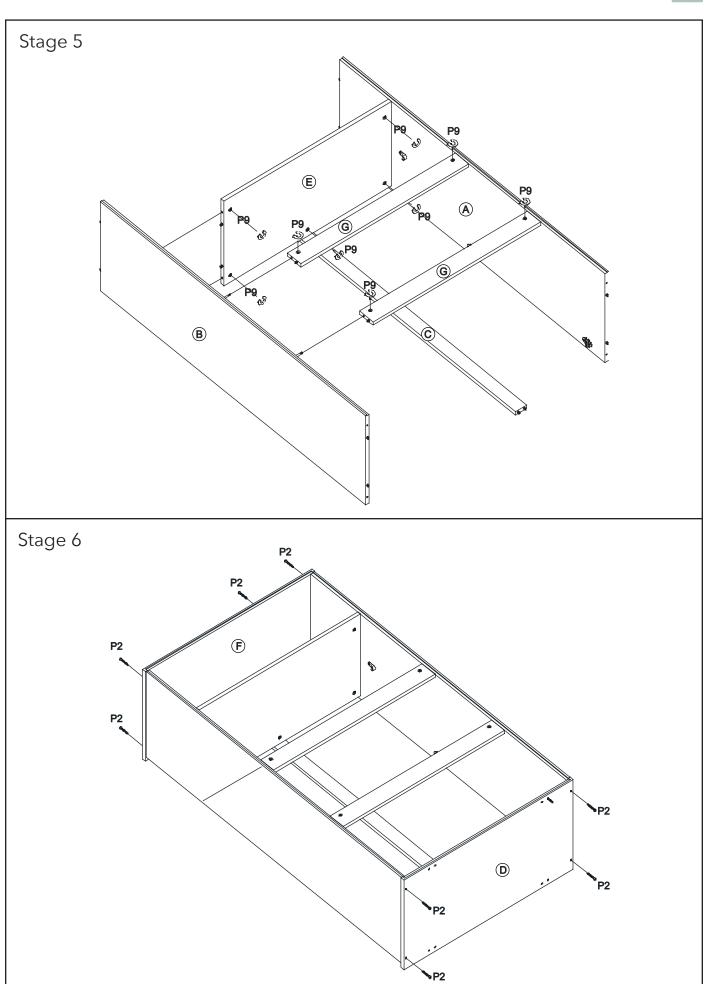


obaby.co.uk





Stage 7

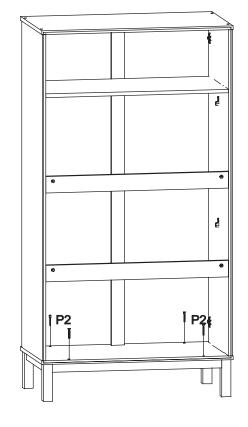

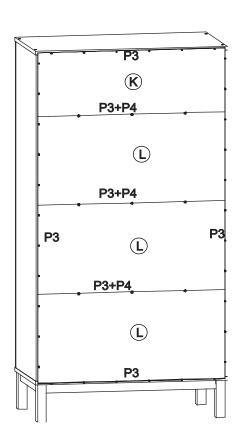


Stage 8

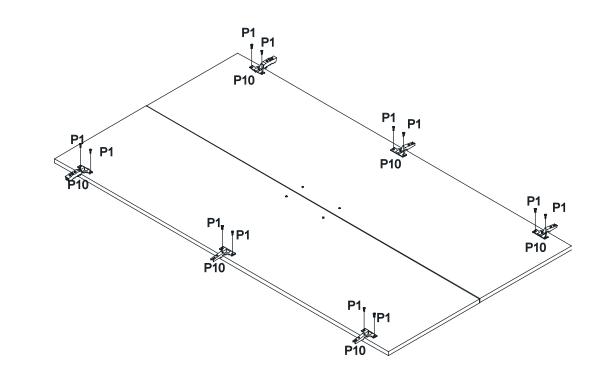

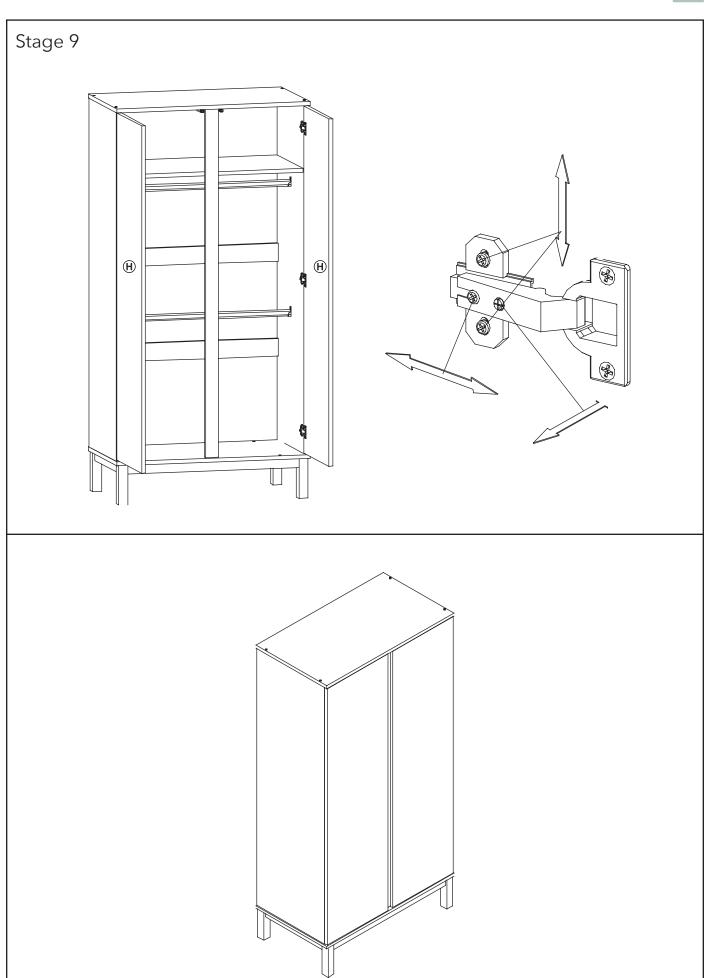

obaby.co.uk

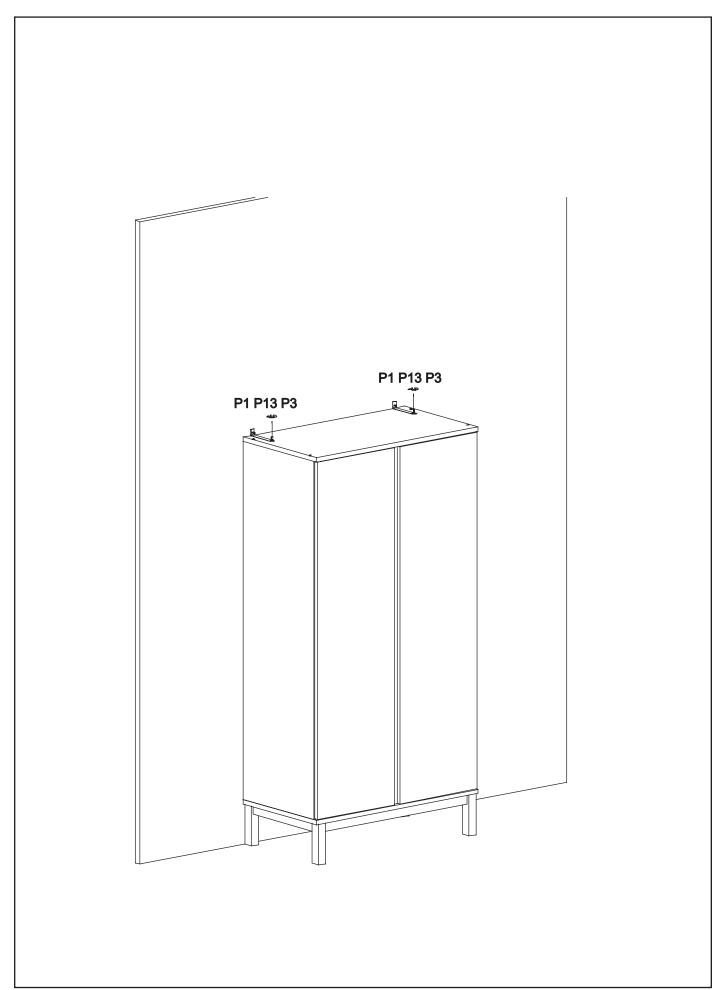

WARNING!


IN ORDER TO PREVENT TIPPING THIS PRODUCT MUST BE USED WITH THE WALL ATTACHMENT DEVICES PROVIDED.

Serious or fatal crushing injuries can occur from furniture tipping over. To help prevent tipping:

- Use the wall attachment devices provided
- Never allow children to climb or hang on drawers, doors or shelves
- Place heaviest items in the lower drawers or shelves
- Do not set TVs or other heavy objects on top of this product
- Never open more than one drawer at a time

Attachment devices are provided with your product, however you will need to source suitable fixings for your wall type. If in doubt, please consult a qualified tradesperson.

Always ensure the wall to be drilled is free from hidden electrical wires, water and gas pipes.

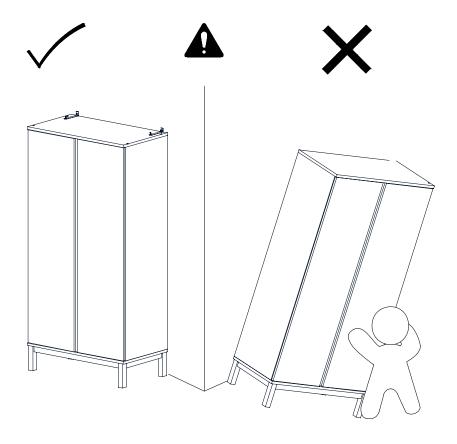













officialobaby

