


ASSEMBLY INSTRUCTION


MODEL : CF 9491-B (5)

A		1pc
B		1pc
C		4pcs
D		2pcs
E		2pcs
F		2pcs
G		2pcs
H		2pcs
I		4pcs
J		8pcs
K		14pcs
L		2pcs
M		4pcs
N		32pcs
O		1pc
P		1pc
Q		6pcs
R		8pcs
S		4pcs


Step 1 : Attach the headboard legs (D) to headboard (A). Attach the footboard legs (E) with footboard (B) as shown.

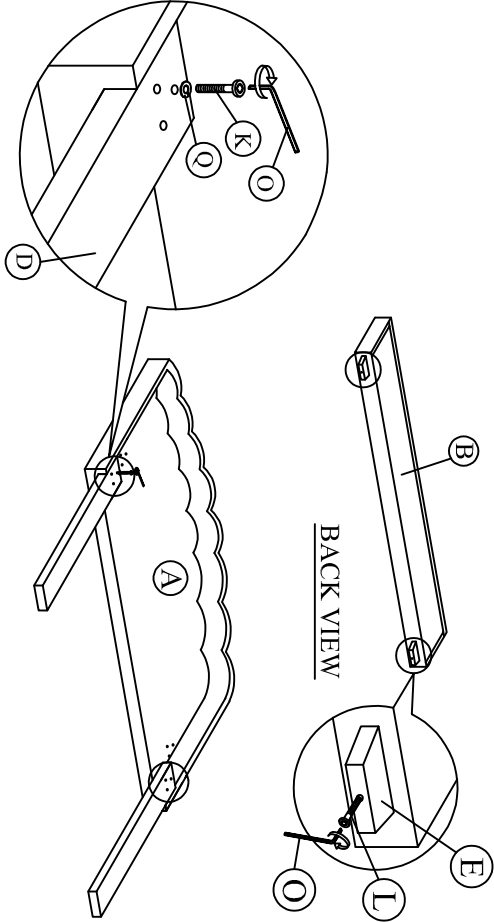


Step 2 : Attach the JCBB Bolt (J) to the headboard and footboard.

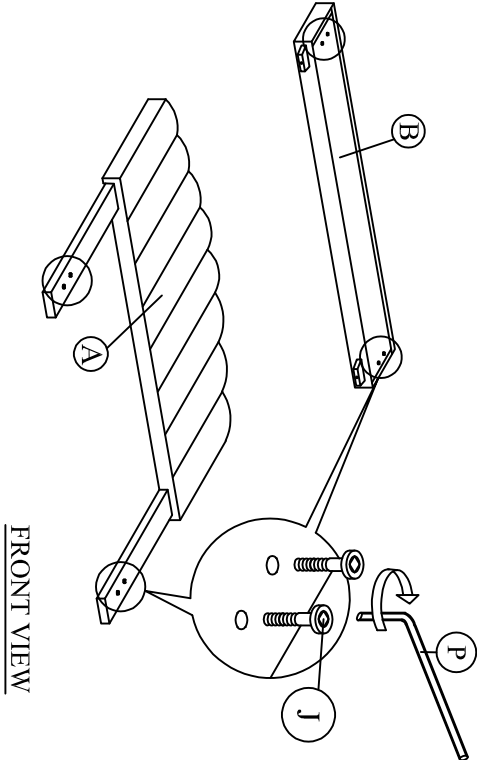


Step 3 : Attach the side rail leg (F) to the side rail (C).

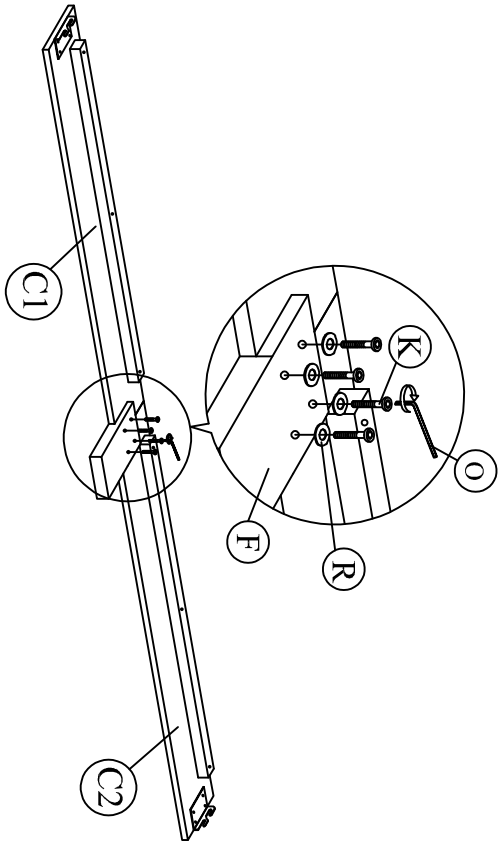

Step 4 : Attach side rail (C) to headboard (A) and footboard (B) by pushing the bracket down to fit it.

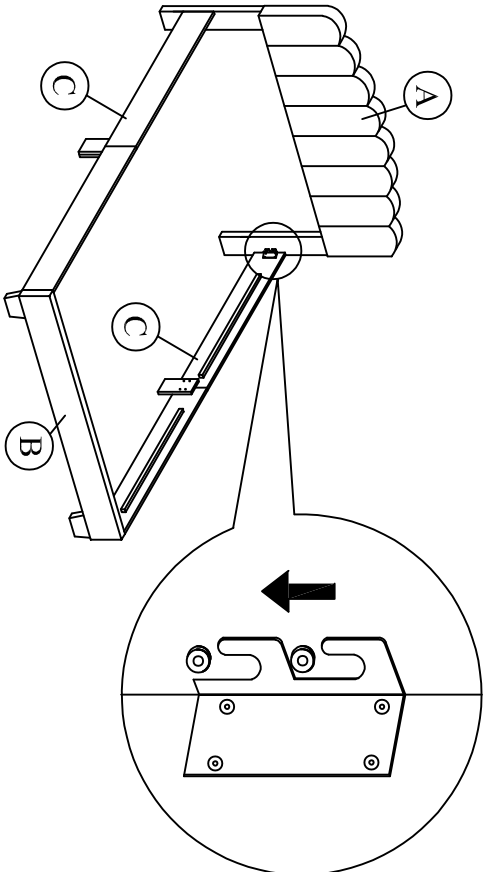

Step 5 : Attach the support legs (I) to the center rail (G) and slats (H).

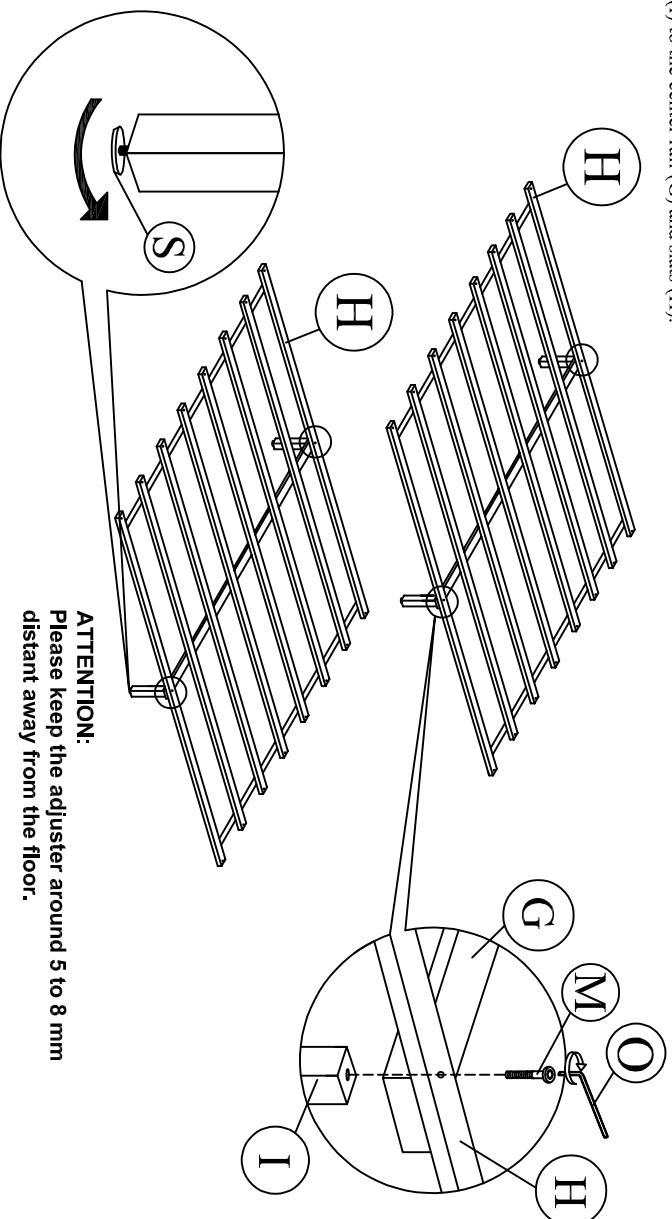

Step 6 : Tighten the 4 Corner with Allen Key (P). Install the bed slats to side rail. Tighten the slats with CSK screw. The distance of the slats should be sufficient to obtain desirable bed stability.

