


AMANI Kids
International


ASSEMBLY INSTRUCTIONS
COZY MID SLEEPER

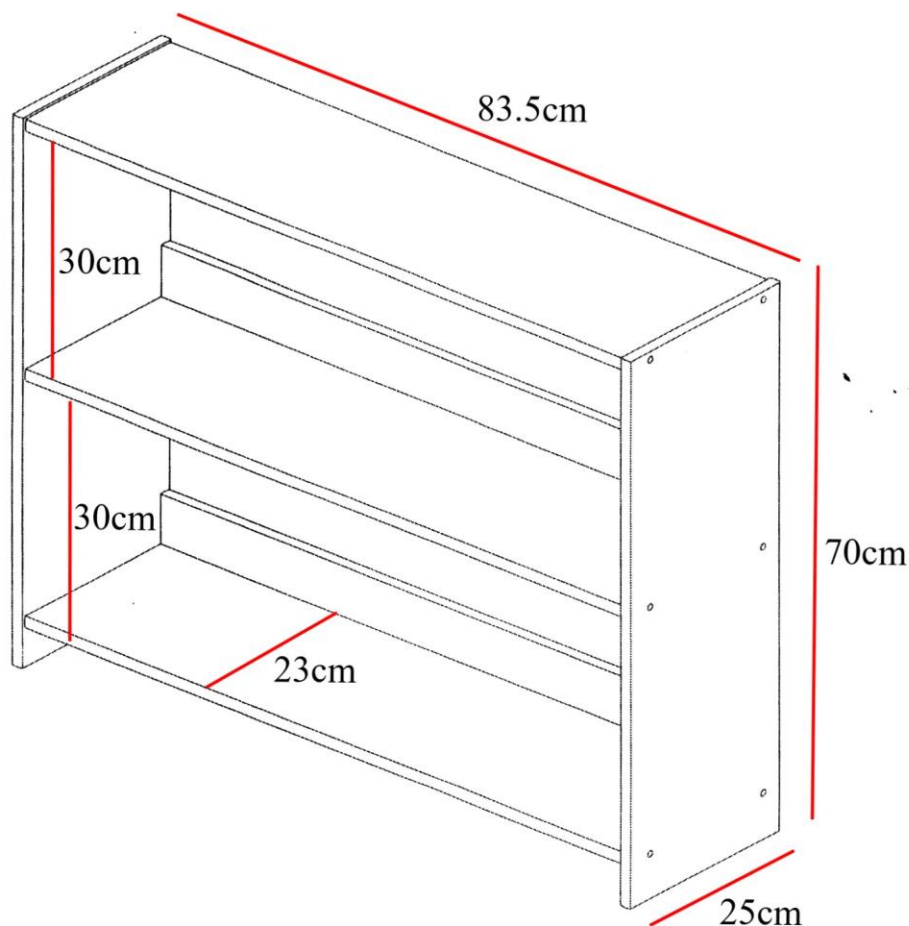

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.


"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

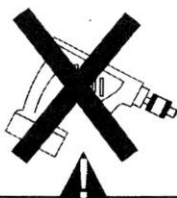


* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.



+

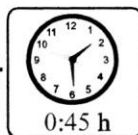

Tools Required



(Not included)




(Not included)







IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Part List - 790 Bookcase Headboard

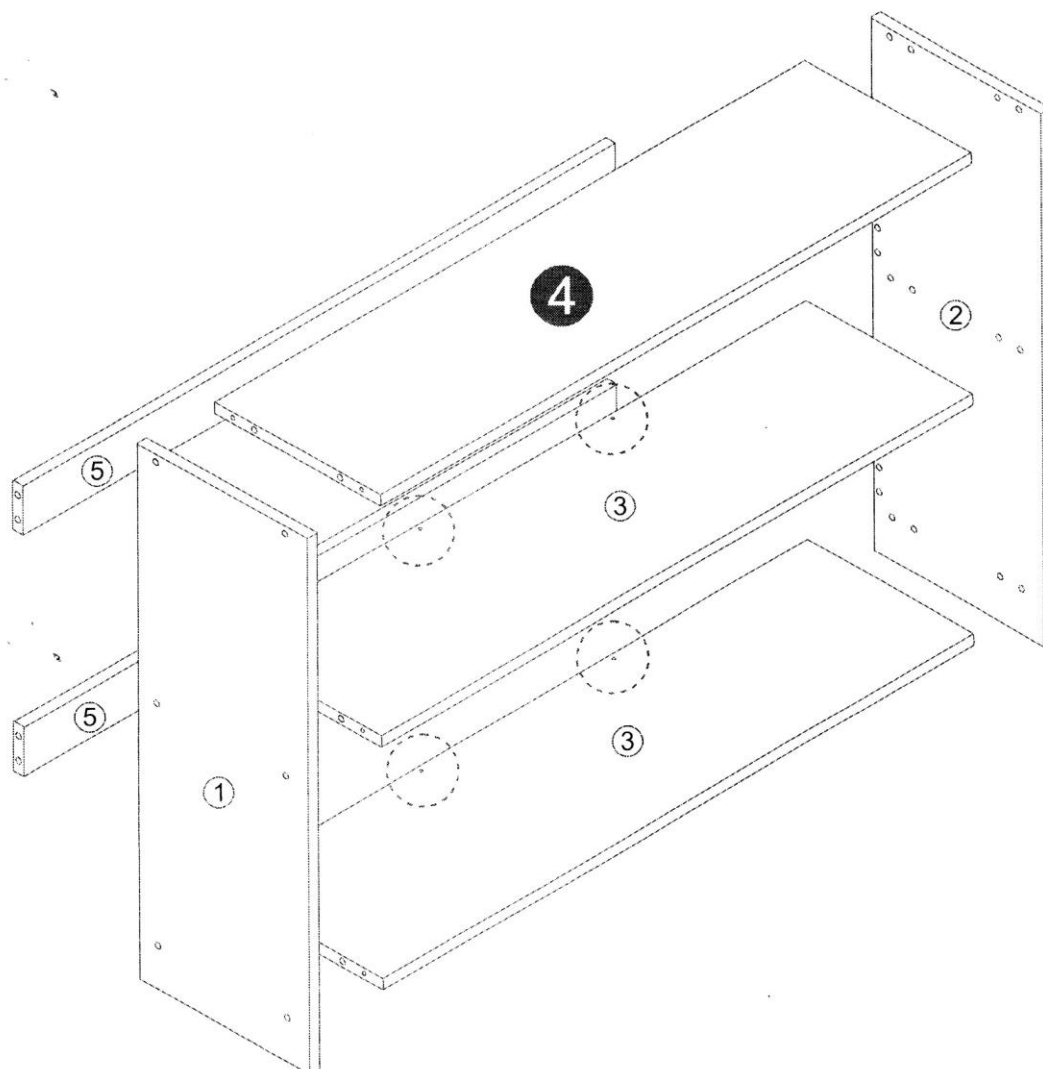


Identifying the Hardware-Identify the hardware using the illustrations below.


A  Qty 7,0 x 50 Screw 12	B  Qty 8 x 30 Wood Dowel 20	C  Qty 4,0 x 30 Screw 04
D  Qty Hex Screwdriver 01		


Part List - 790 Bookcase Headboard

01

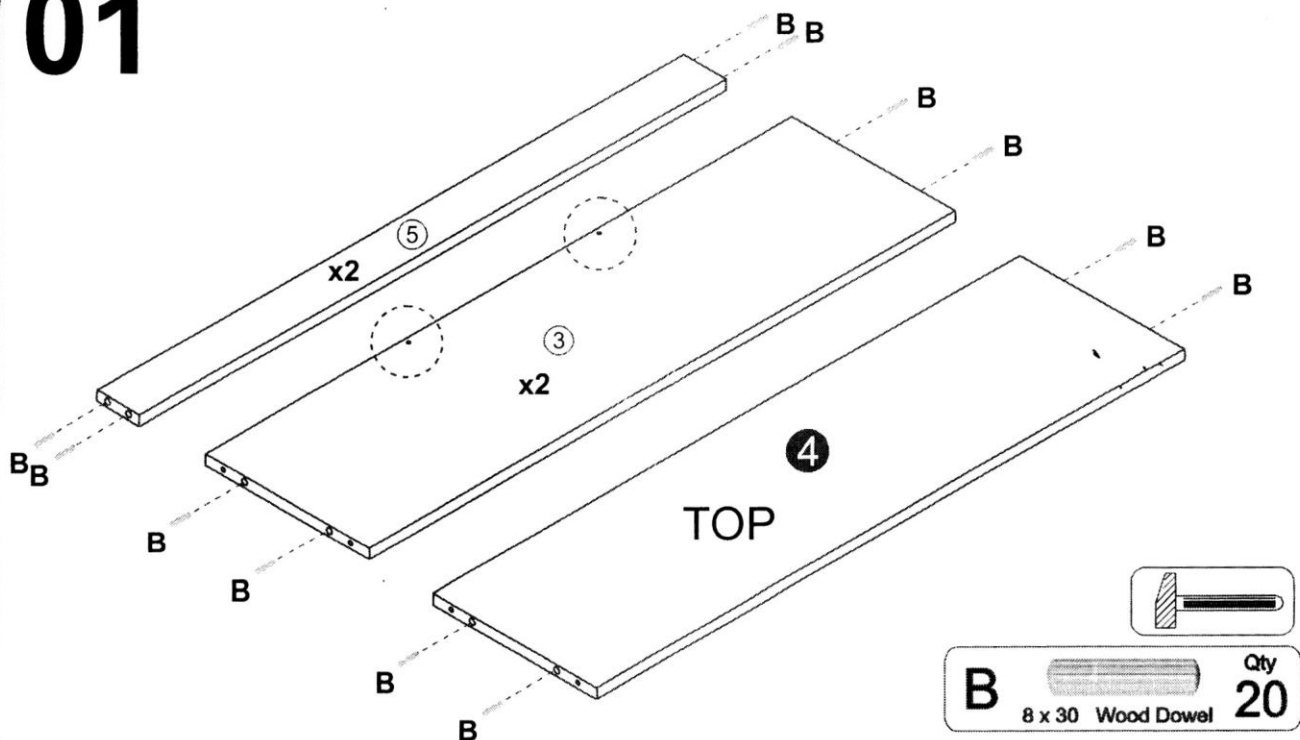



02

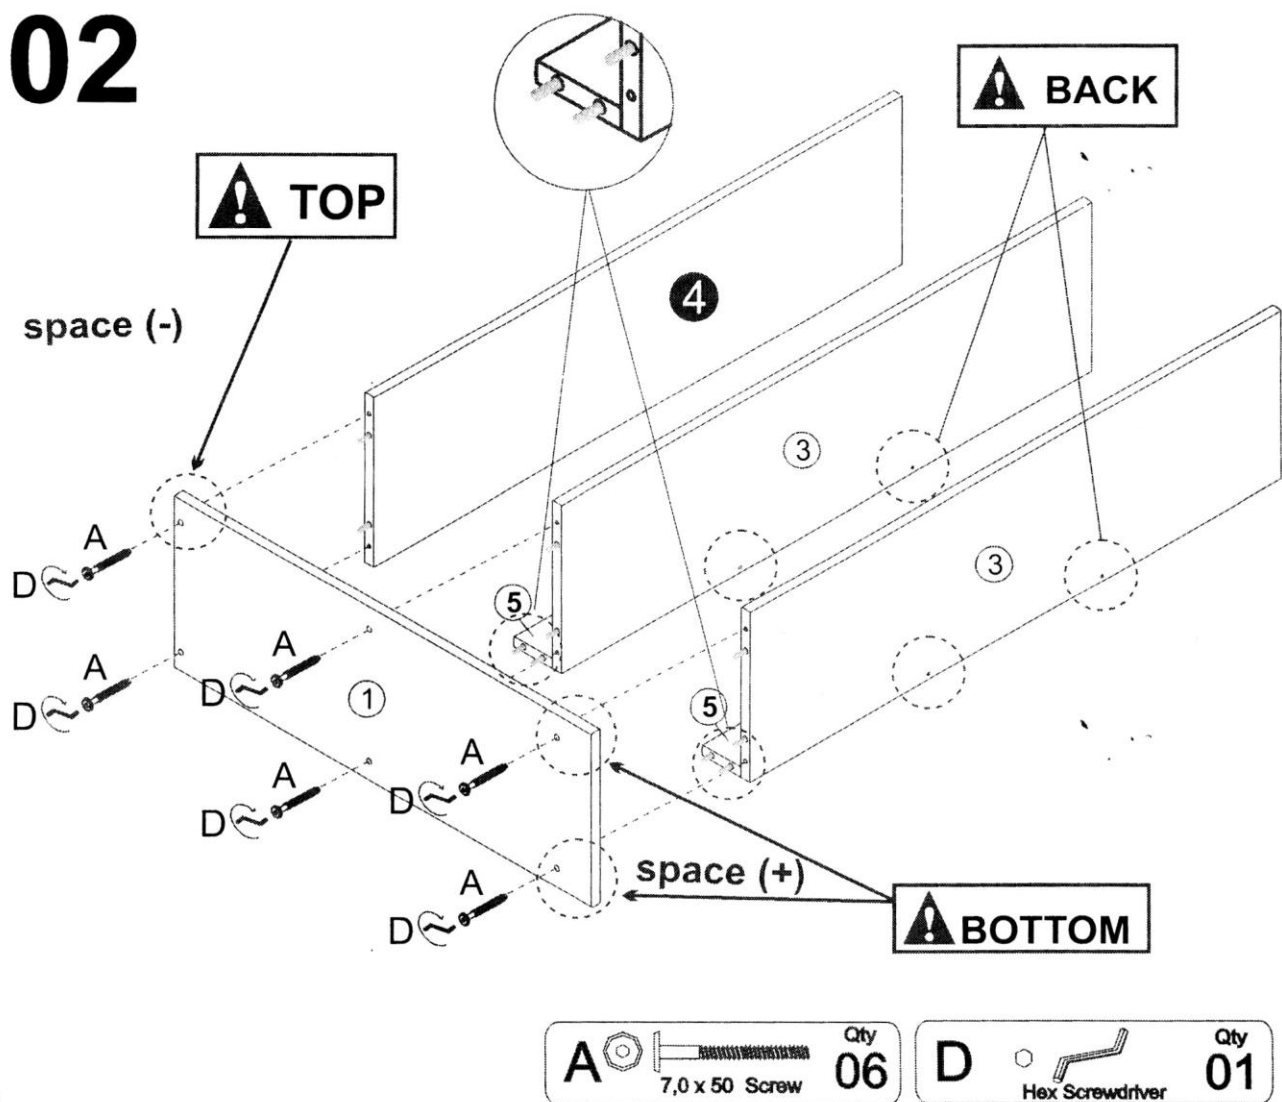

A  7,0 x 50 Screw Qty 06

D  Hex Screwdriver Qty 01

03



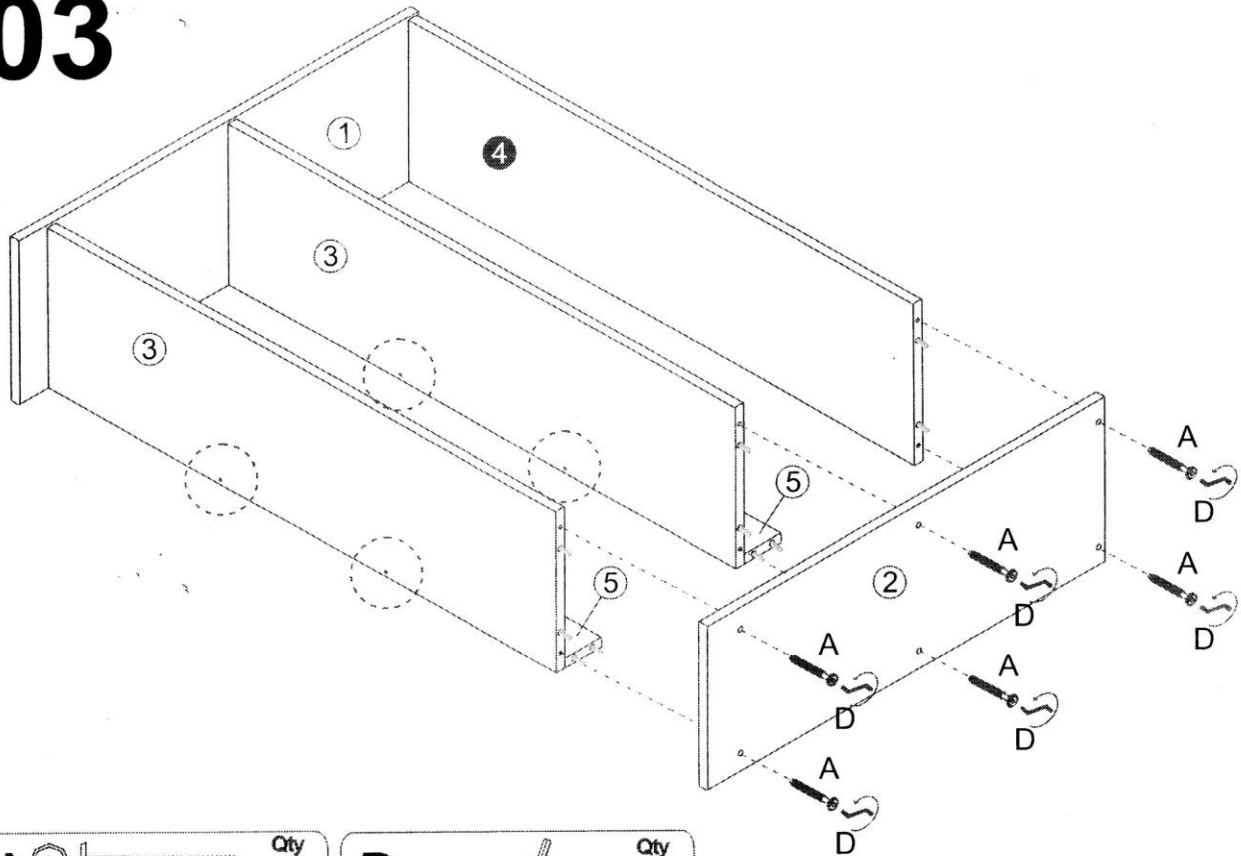


Qty
06



Qty
01

04

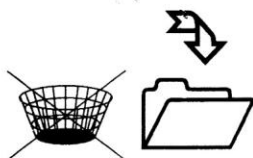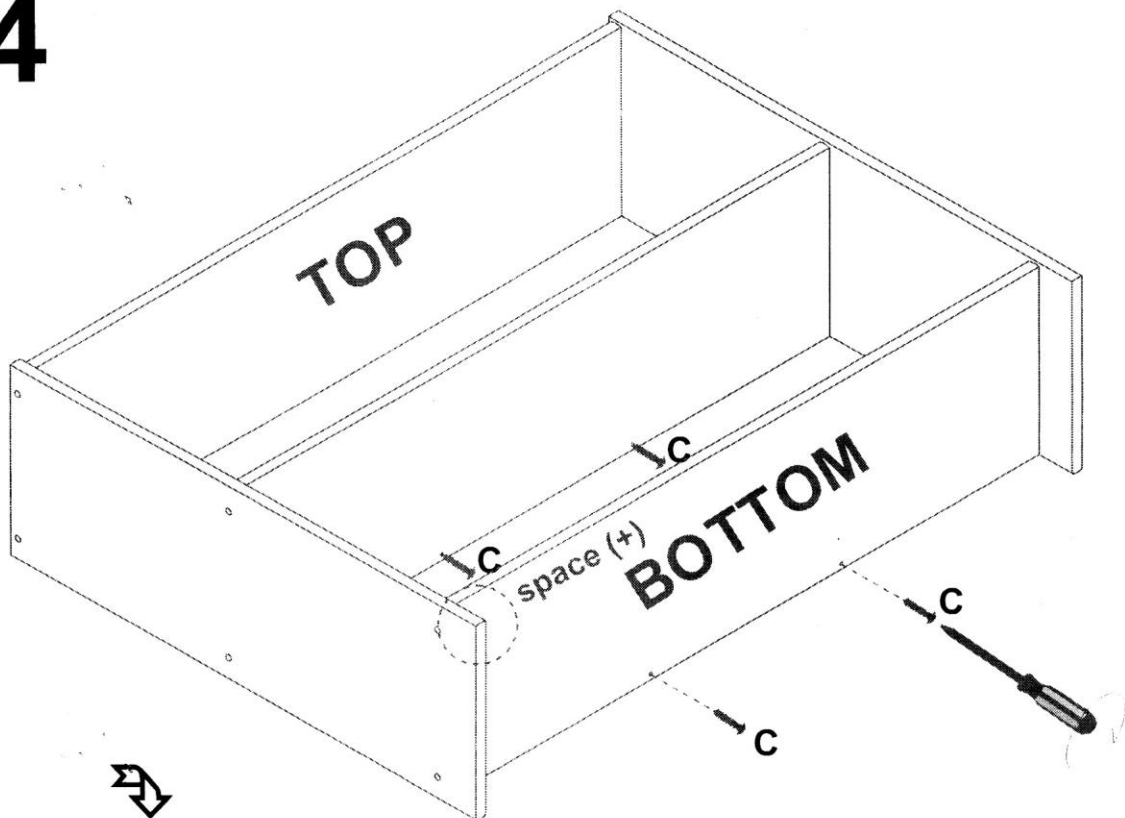


Qty
04



AMANI Kids
International


ASSEMBLY INSTRUCTIONS
COZY MID SLEEPER

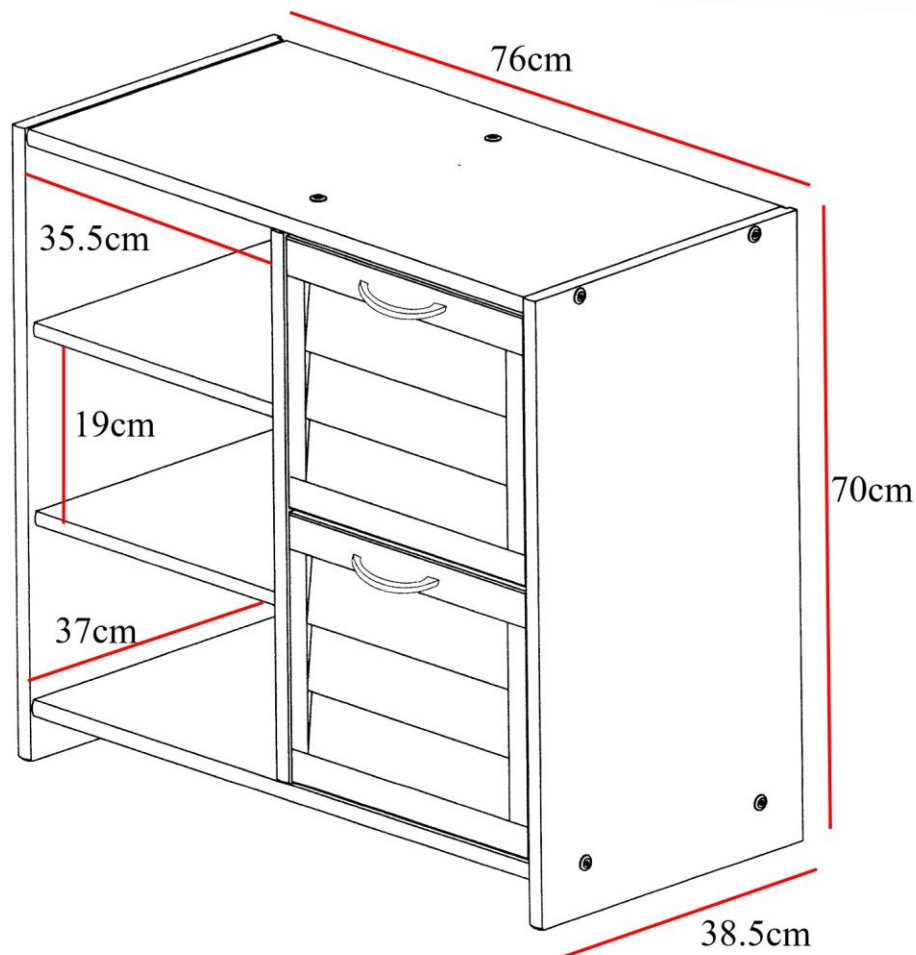


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.


"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

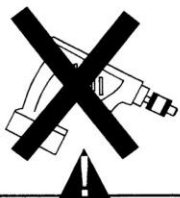


* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.

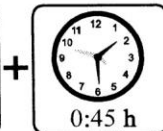

Tools Required



(Not included)




(Not included)











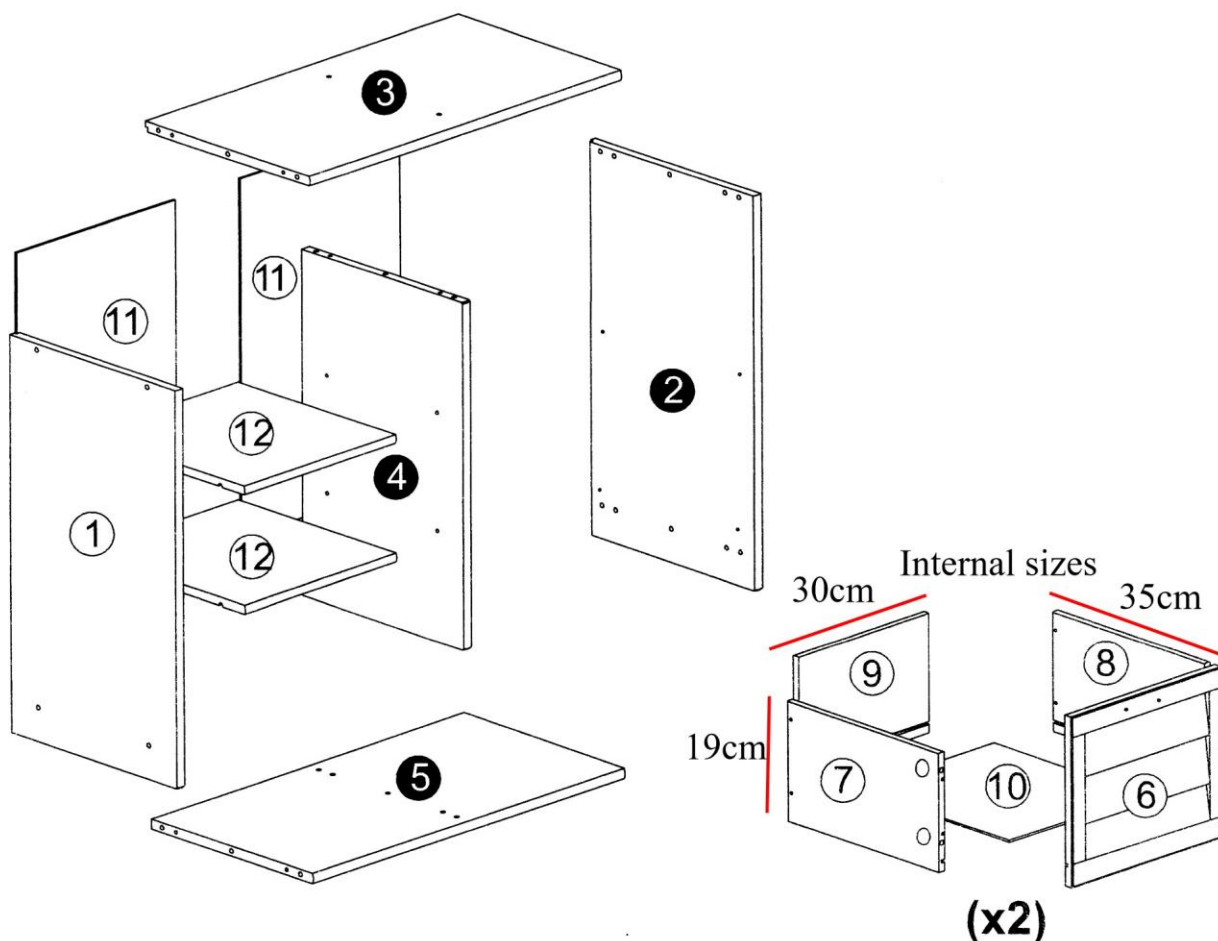



IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY


Part List - 790 2 DRAWERS CHEST LOUVER



Identifying the Hardware - Identify the hardware using the illustrations below

A  Qty 12	B  Qty 26	C  Qty 16
D  Qty 08	E  Qty 23	F  Qty 01
G  Qty 05	H  Qty 16	i  Qty 02
J  Qty 02	K  Qty 02	L  Qty 04


01

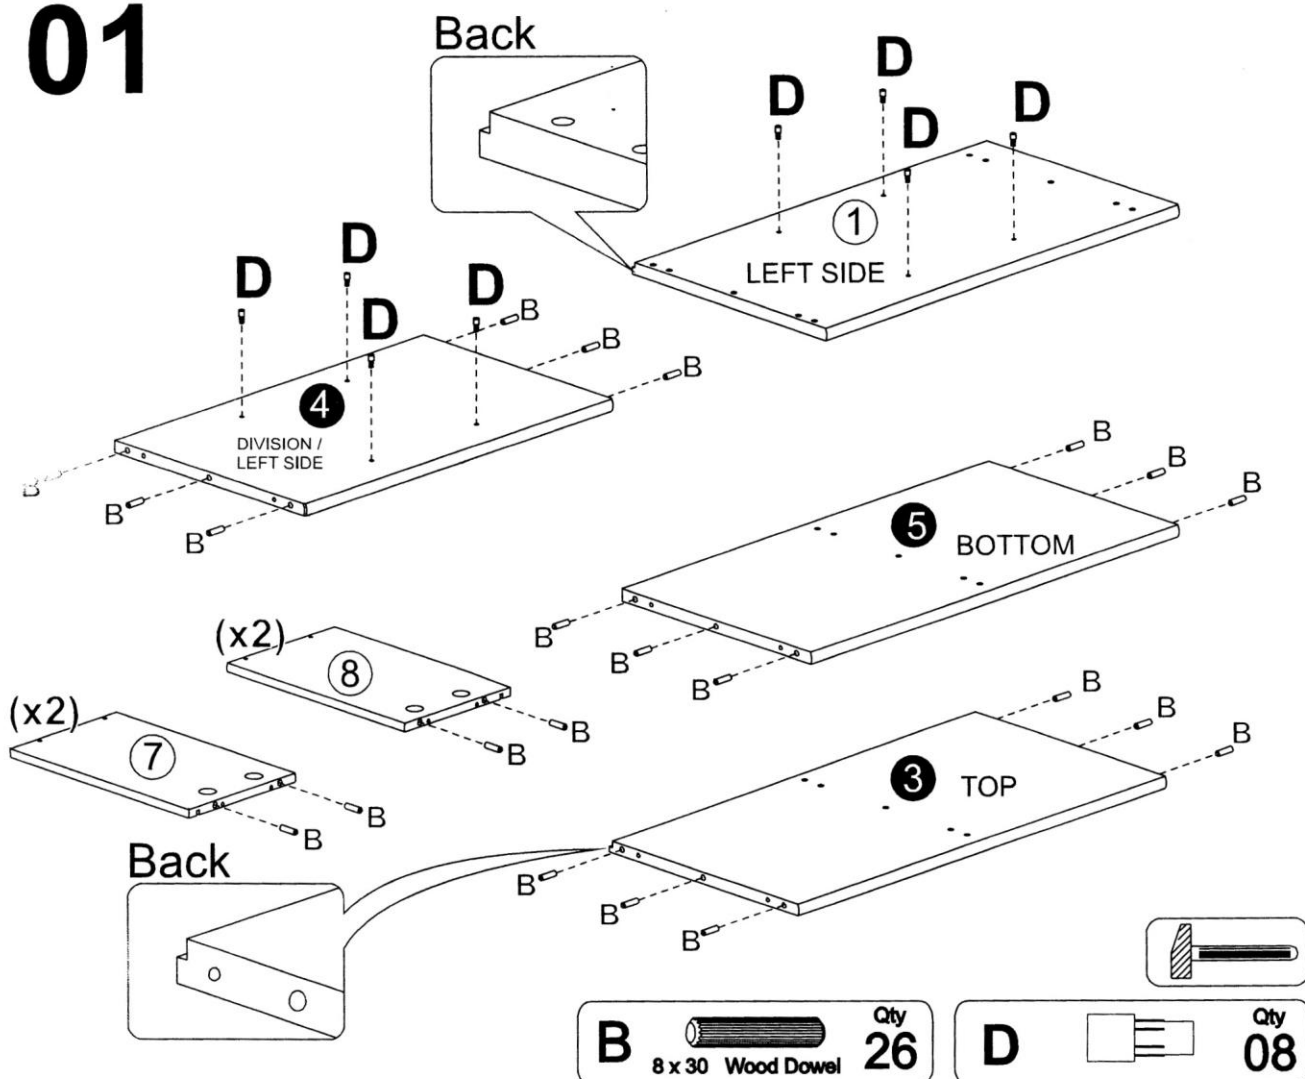


SET OF METAL SLIDES FOR THE DRAWERS

The metal glides hardware are all in one packed. Please separate the left and right pieces like a pair.

- The glides **# i** are used on chest panel side and has a left and right pieces.
- The glides **# J** are used on drawers side, also has a left and right pieces.

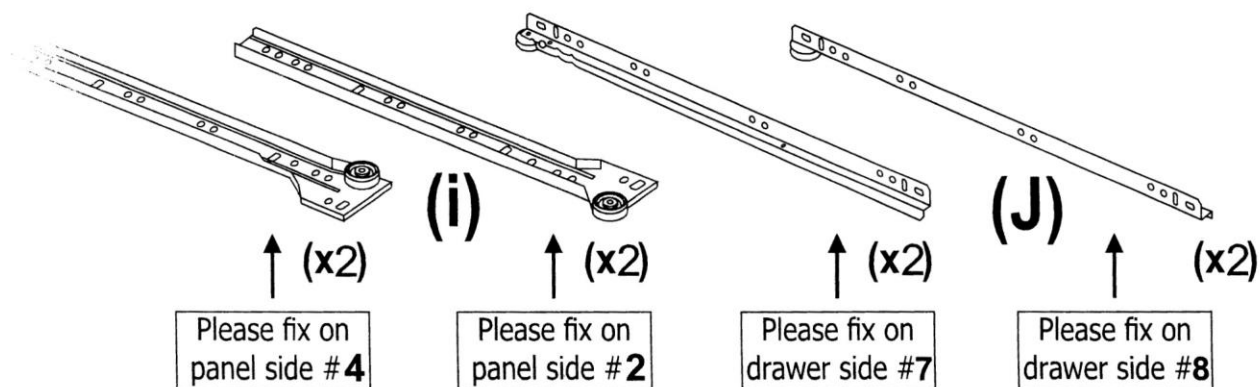

02

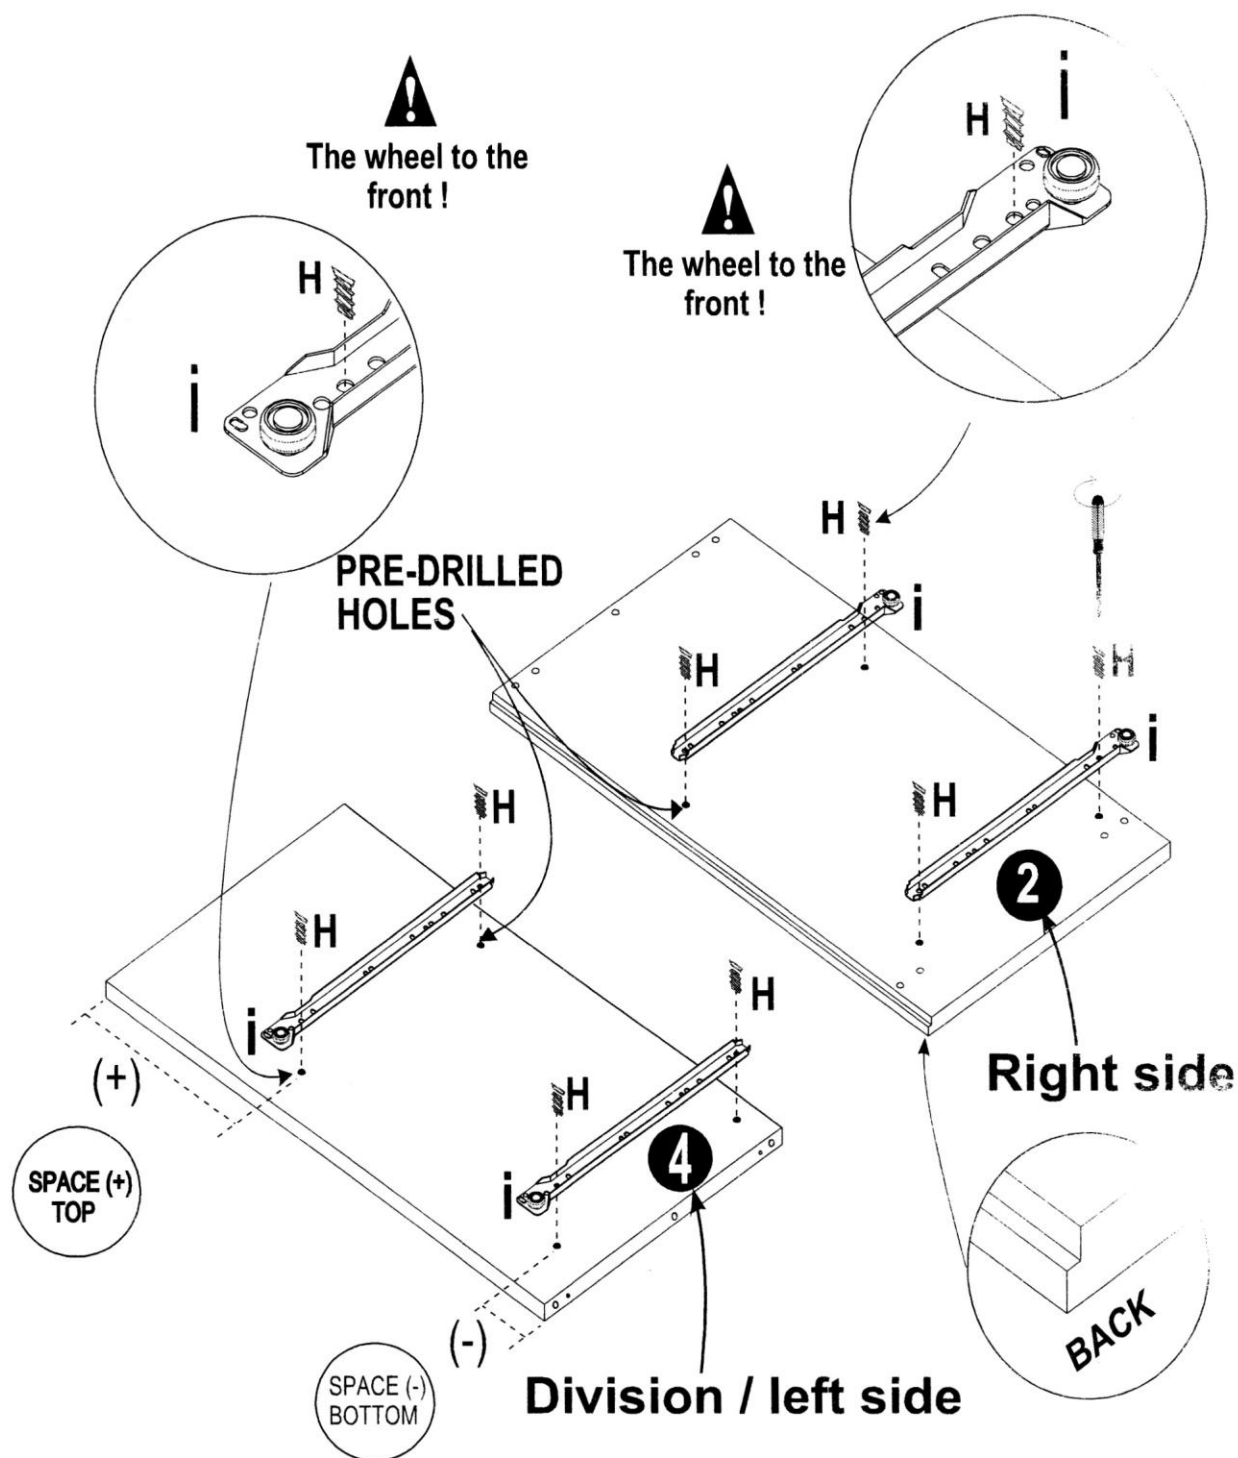

i



Qty

02




Drawer Runner 350mm


H

6,0 x 10 Screw

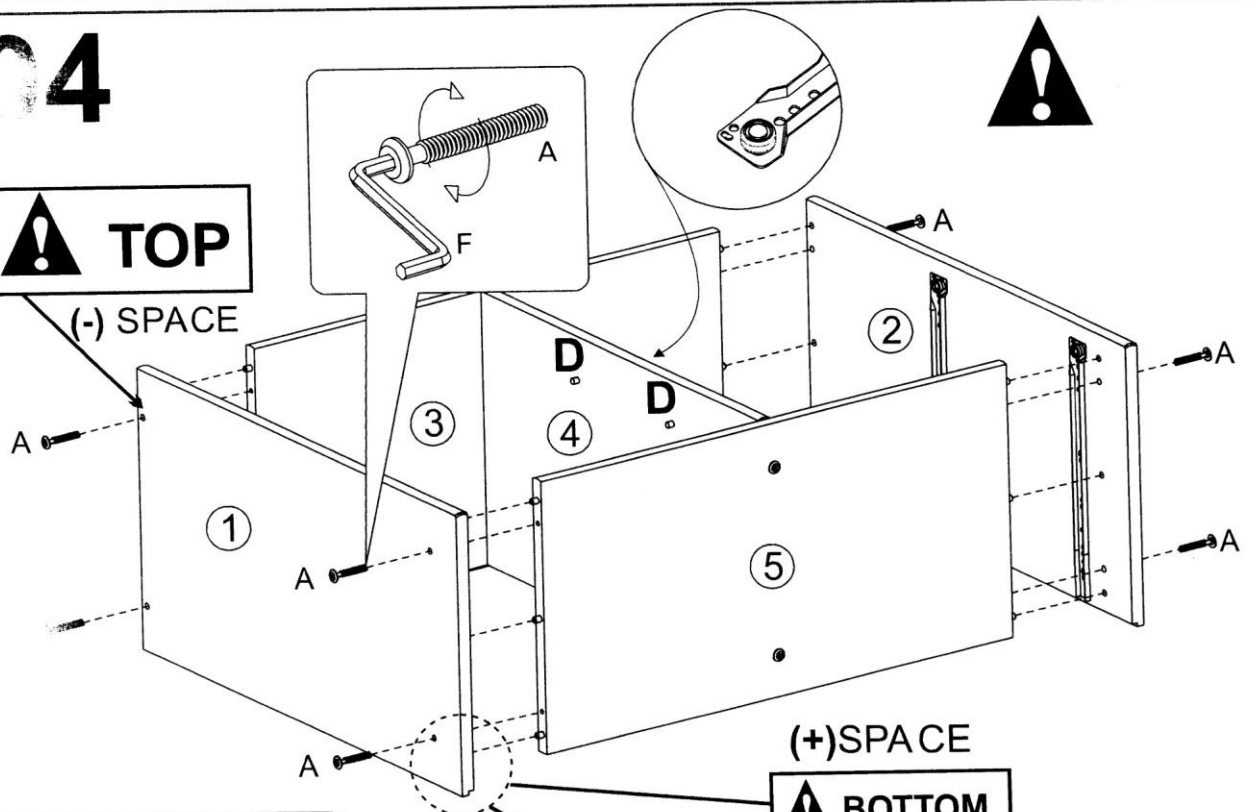


05

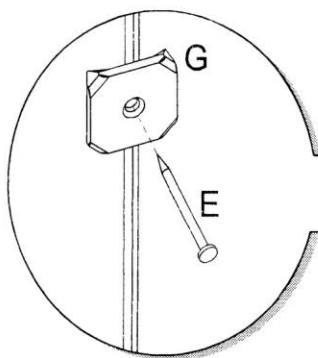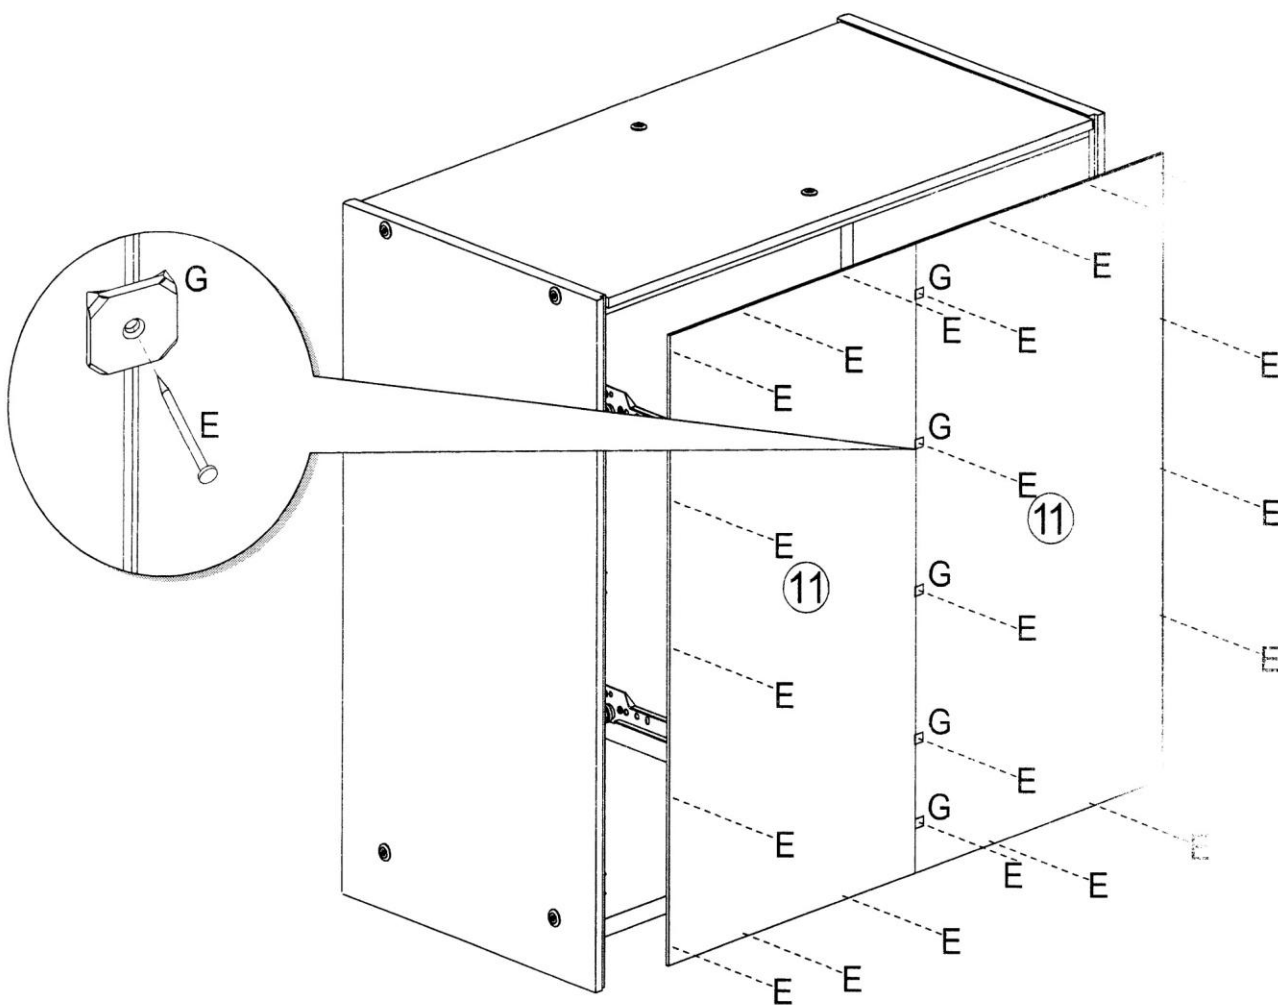



E		Qty
	10 x 12	

G		Qty


06

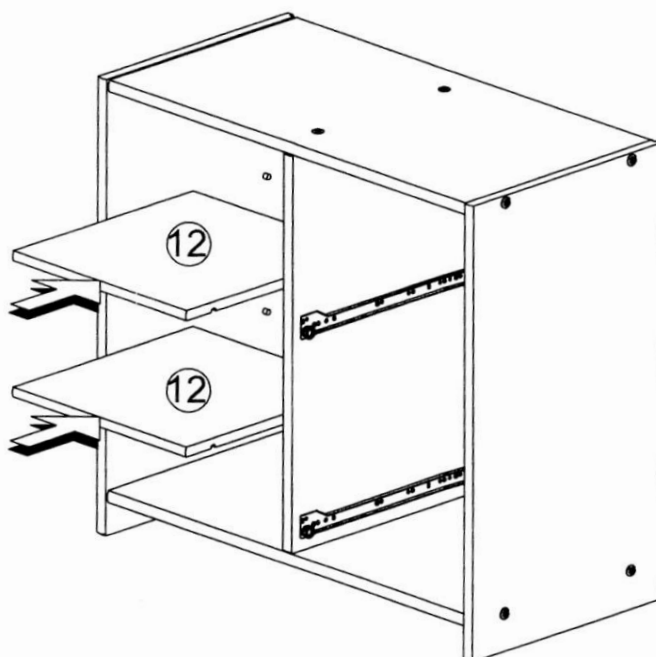



07

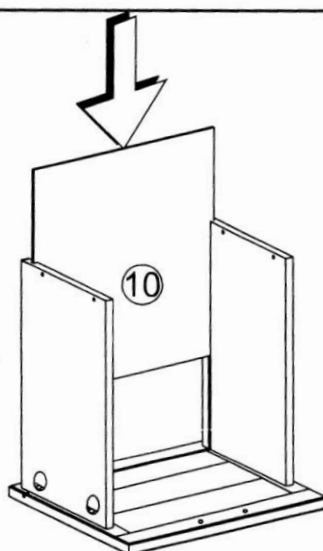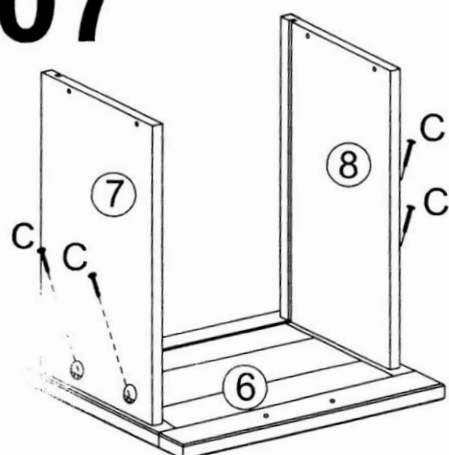


(x2)

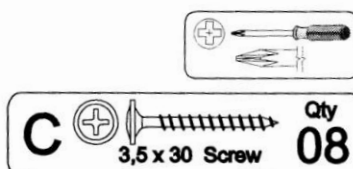

08 (x2)

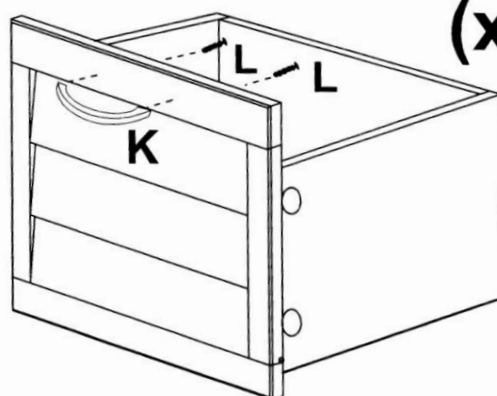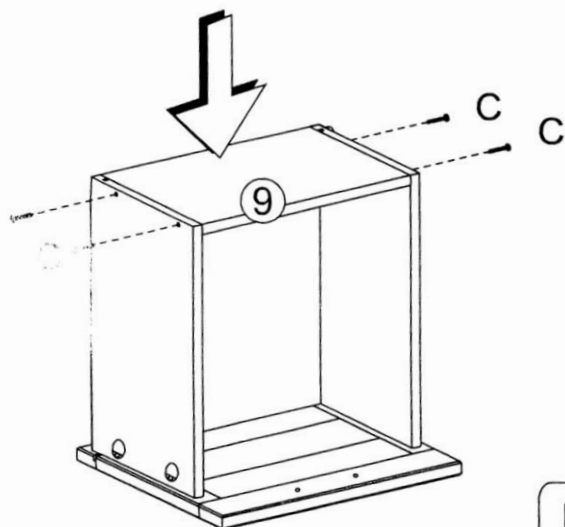


(x2)

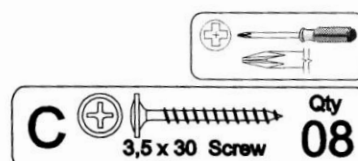


09

(X2)

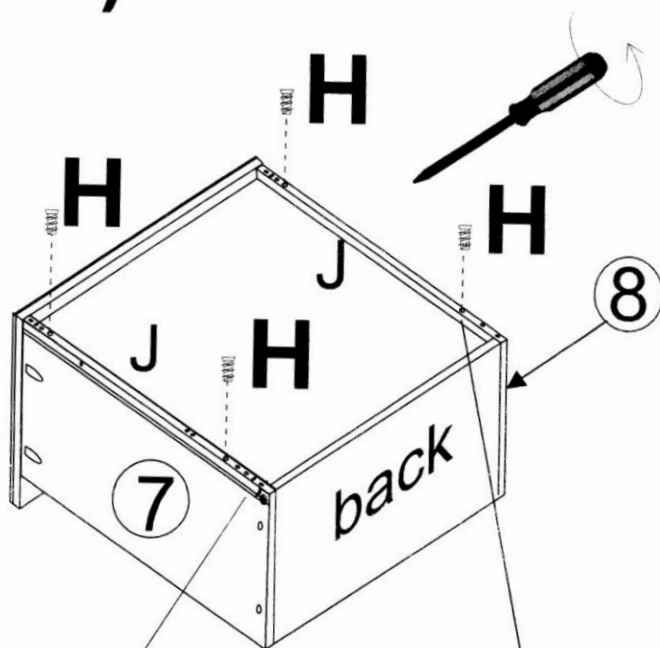


STEP 1

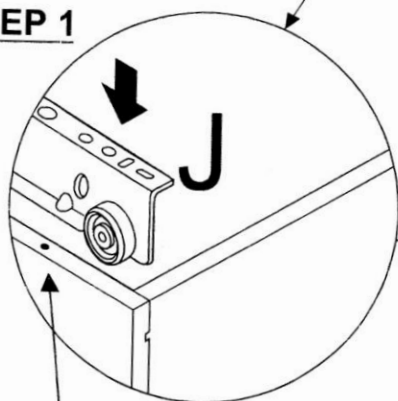

! PRE-DRILLED HOLES

STEP 2

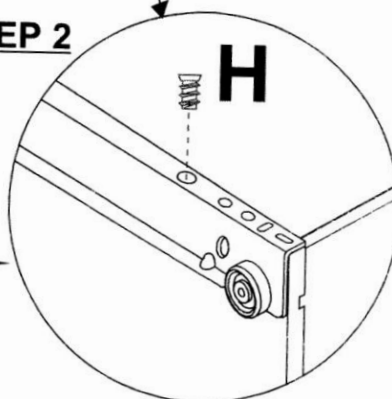

! The wheel to the back !

J



Drawer Runner 350mm

Qty

02





H



6,0 x 10 Screw


08

10

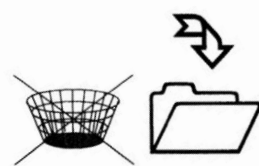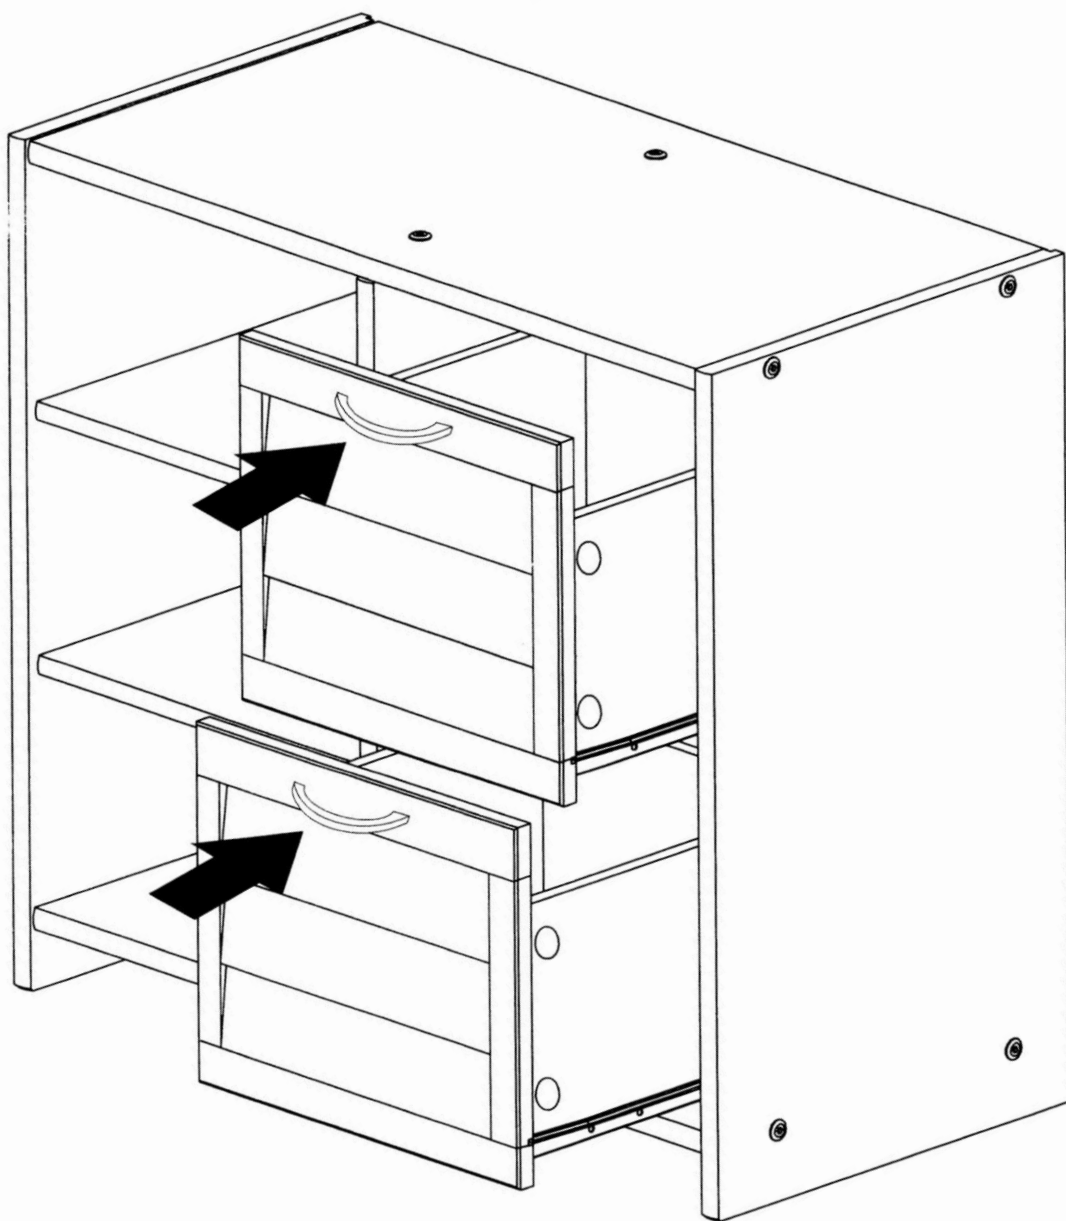

AMANI Kids
International


ASSEMBLY INSTRUCTIONS
COZY MID SLEEPER

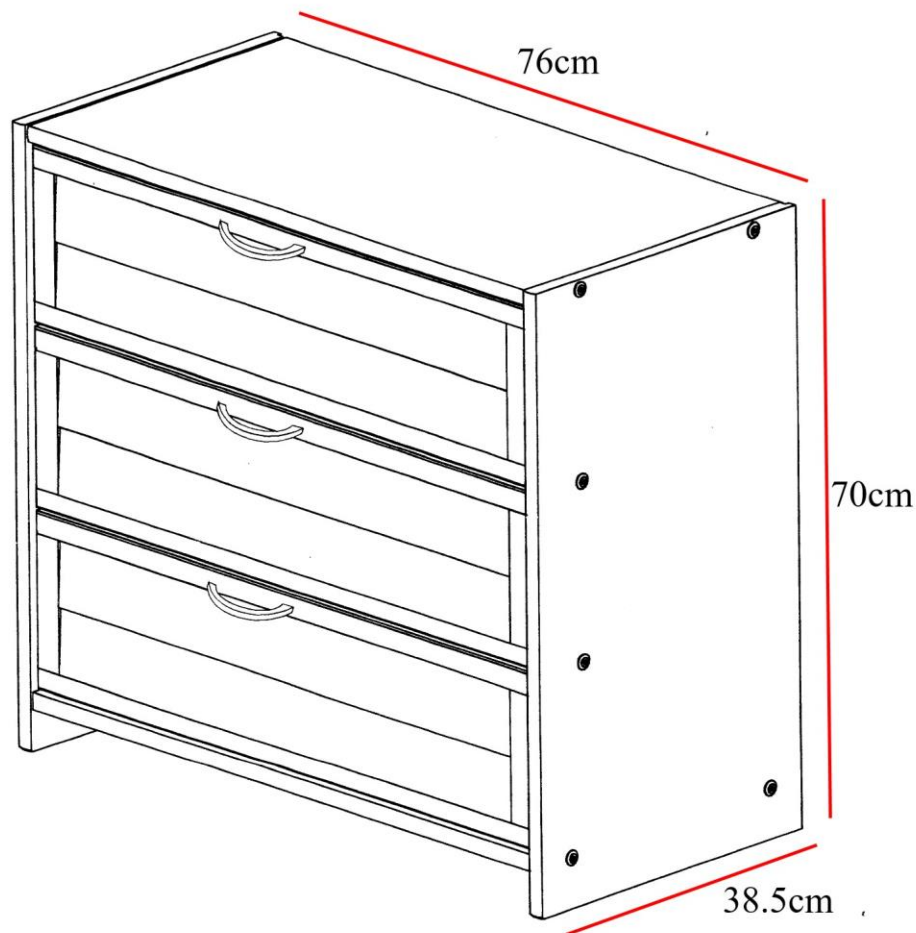


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.


"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

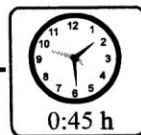

Tools Required



(Not included)



(Not included)




* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.





IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

Part LISt - 790 3 DRAWERS CHEST LOUVER


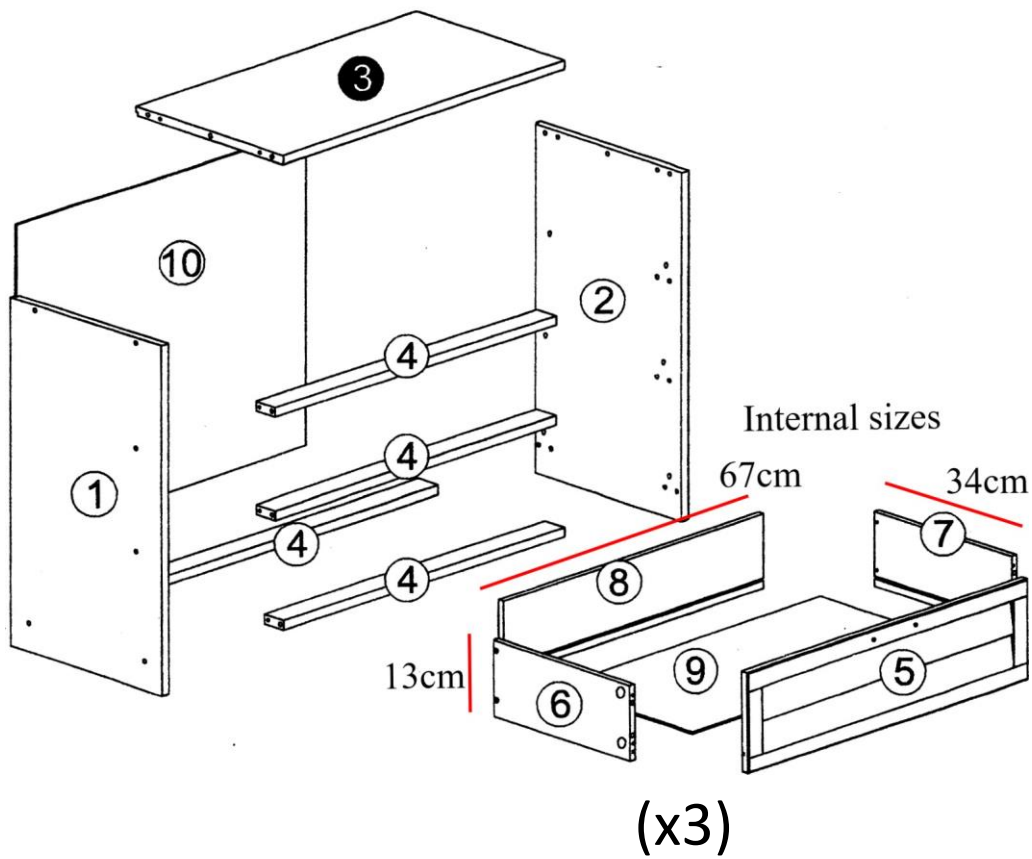


Identifying the Hardware-identify the hardware using the illustrations below.



:

01

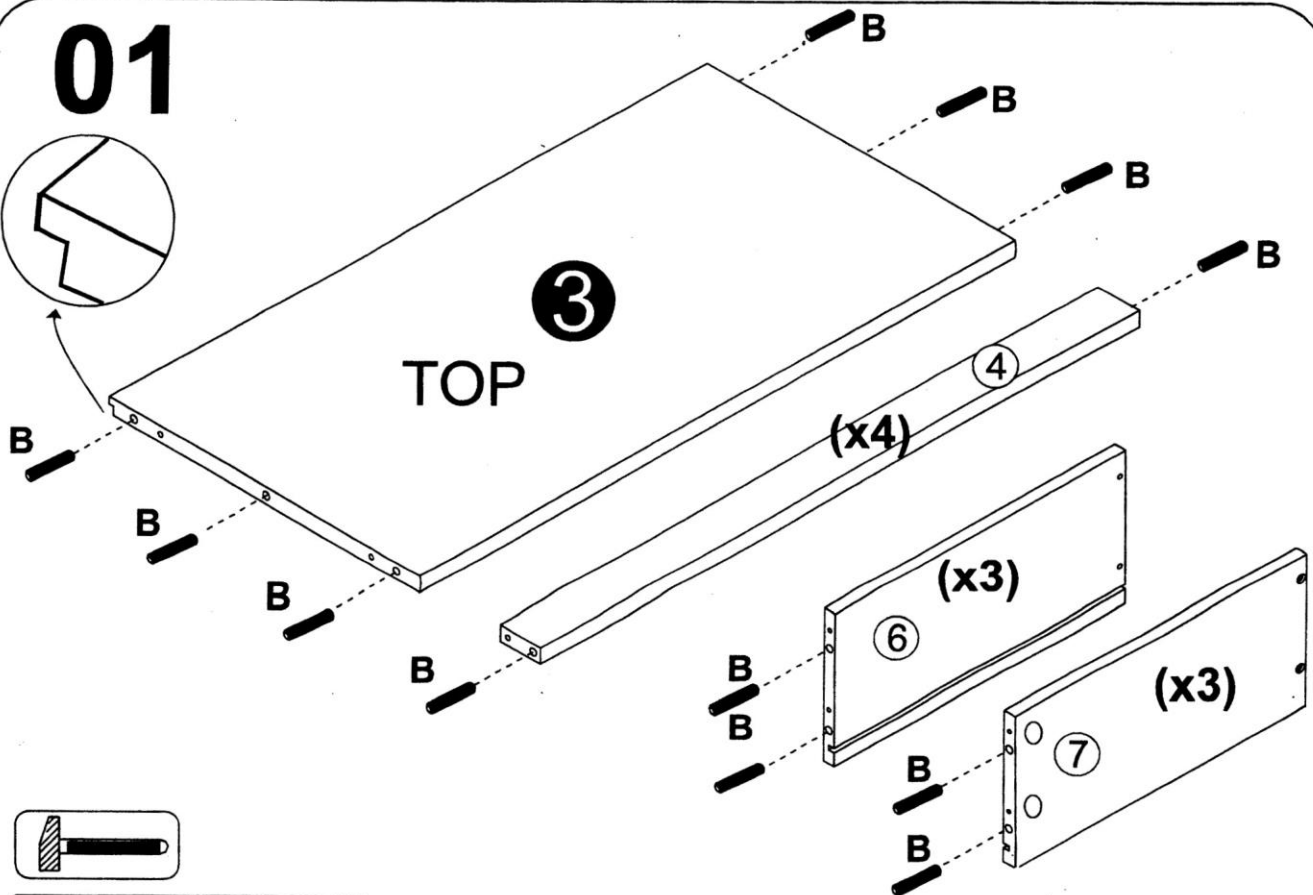

B

8 x 30 Wood Dowel


Qty

26

SET OF METAL SLIDES FOR THE DRAWERS

The metal glides hardware are all in one packed. Please separate the left and right pieces like a pair.

- The glides **# i** are used on chest panel side and has a left and right pieces.
- The glides **# J** are used on drawers side, also has a left and right pieces.

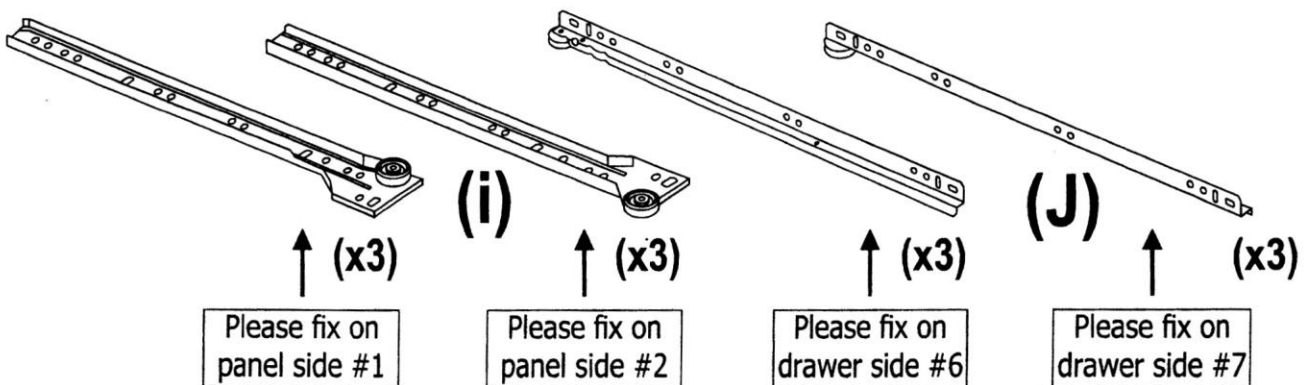


02




The wheel to the front !




The wheel to the front !

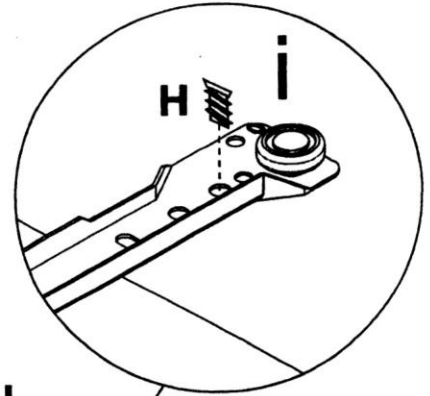

PRE-DRILLED HOLES

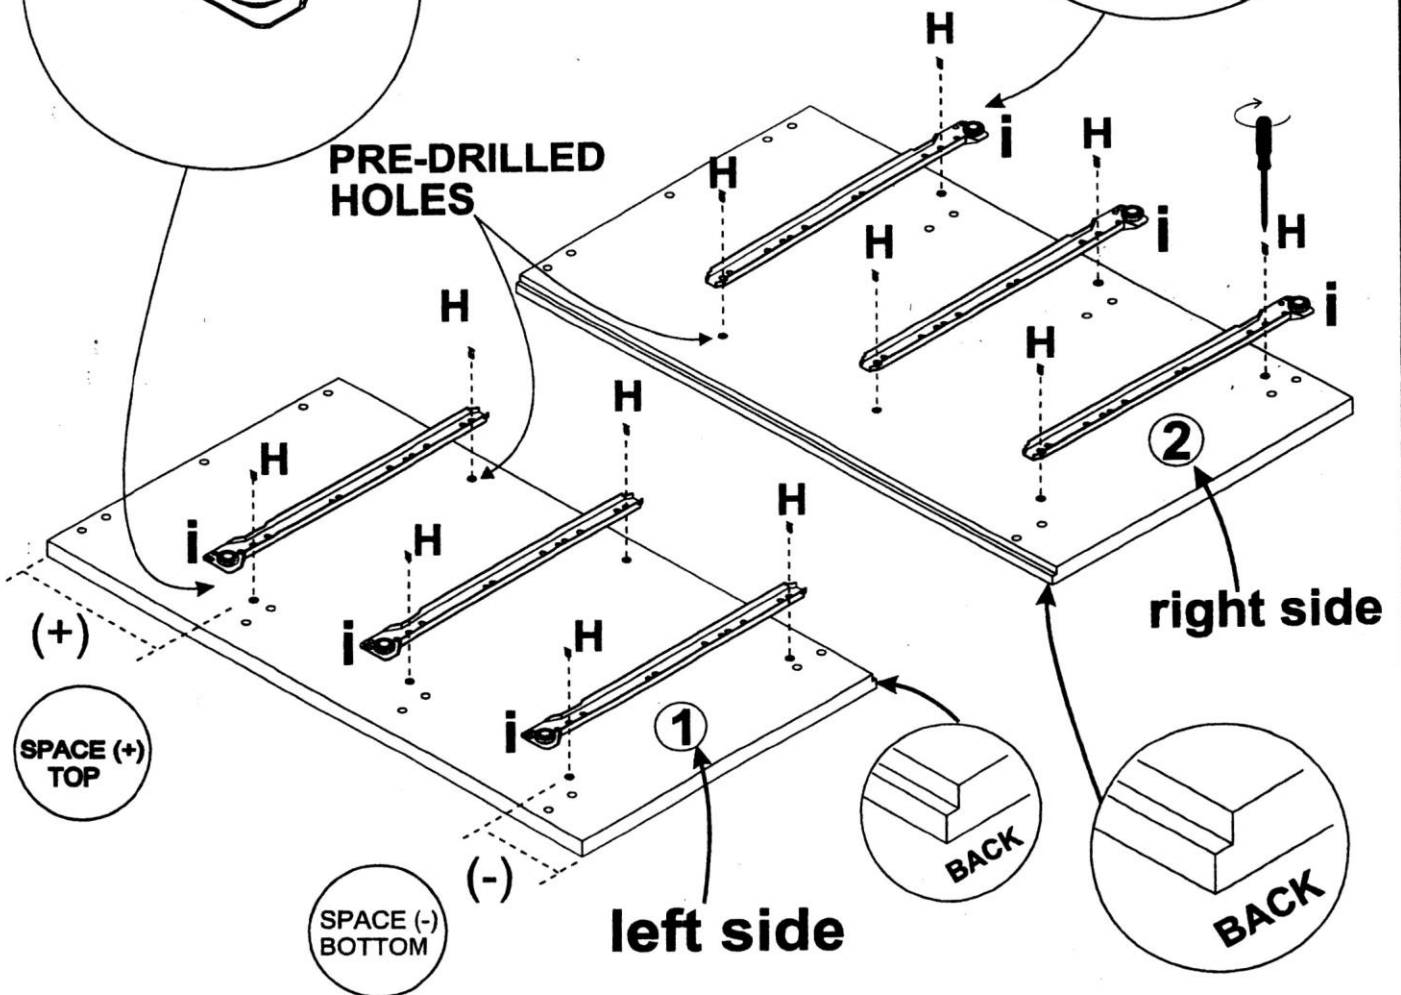


i



Drawer Runner 350mm

Qty
03



H





6,0 x 10 Screw

Qty
12



03





(-)SPACE

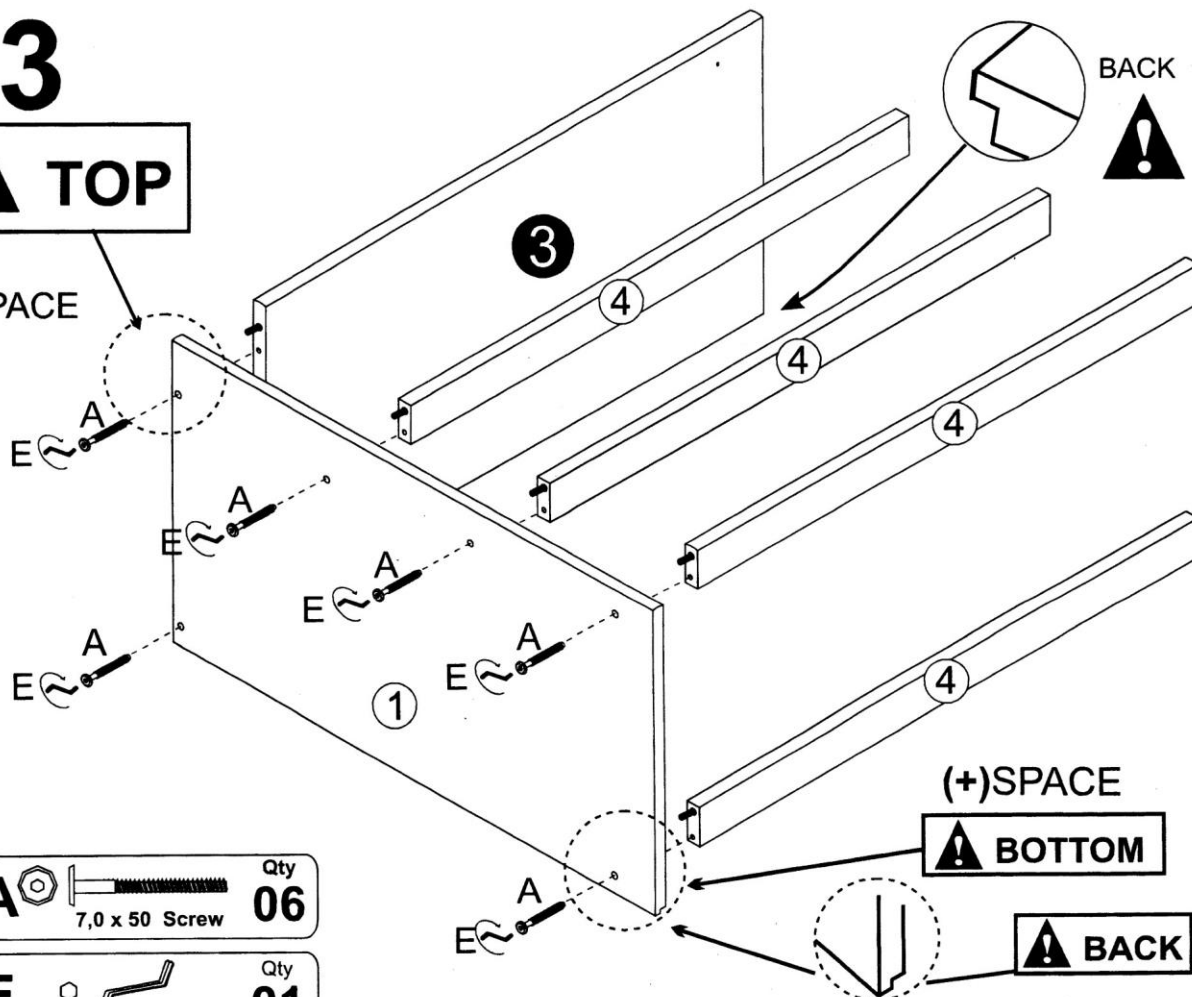

04

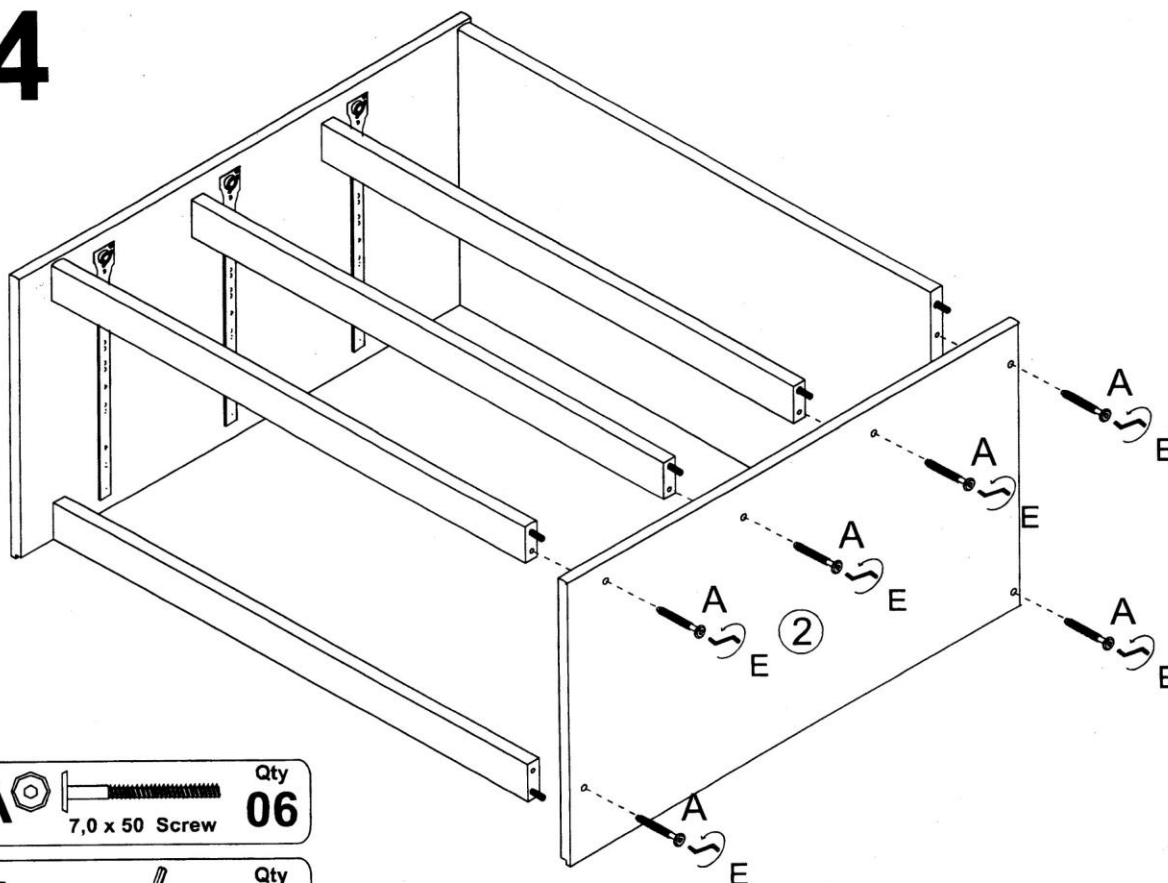

05

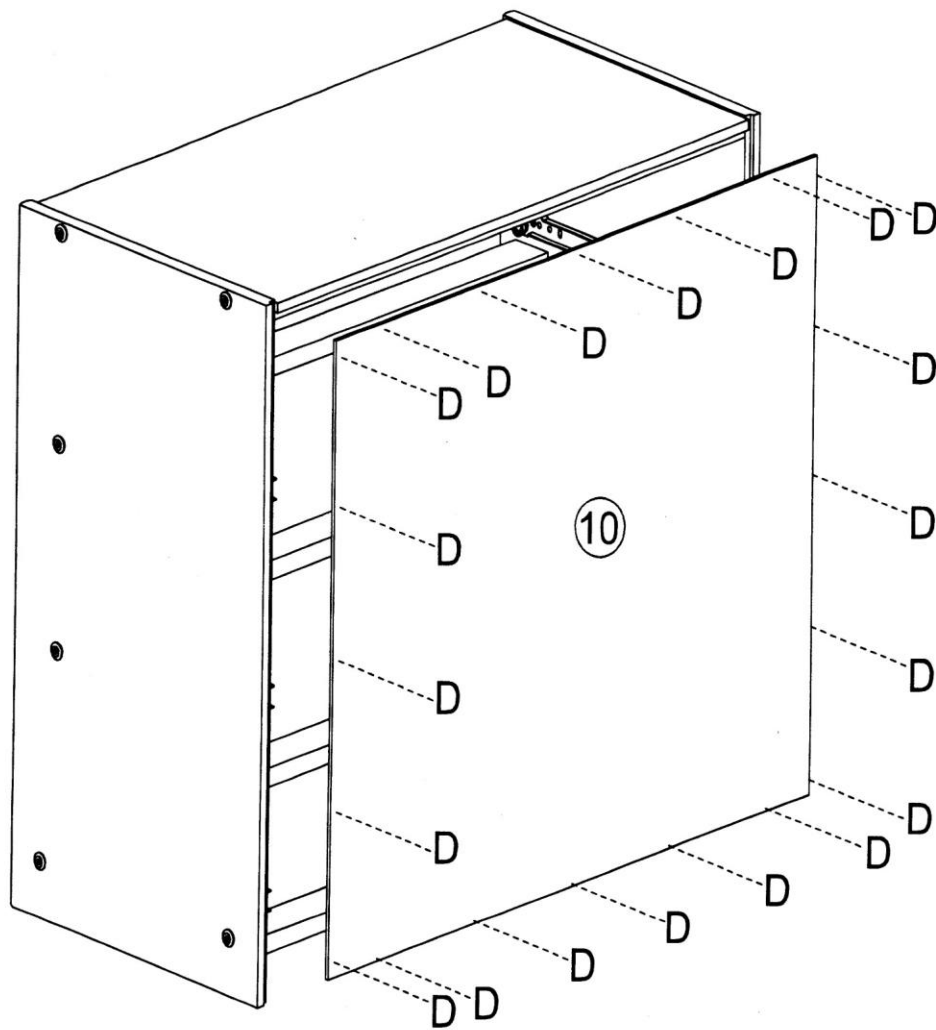

D





8 x 8

Qty

20


06

(x3)

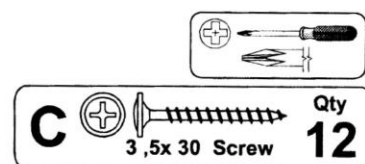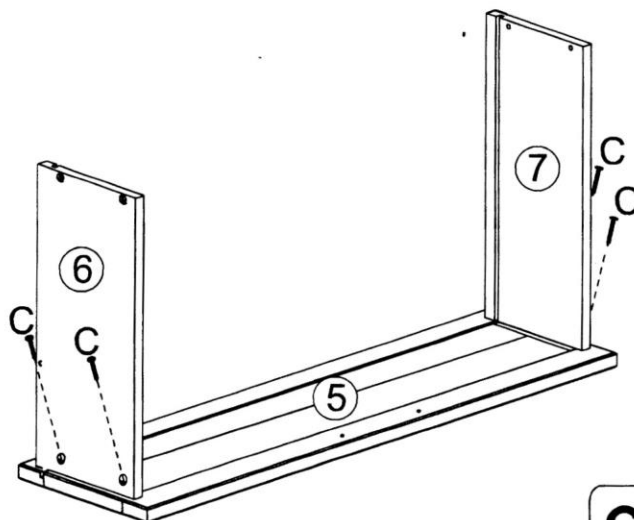





07

(x3)

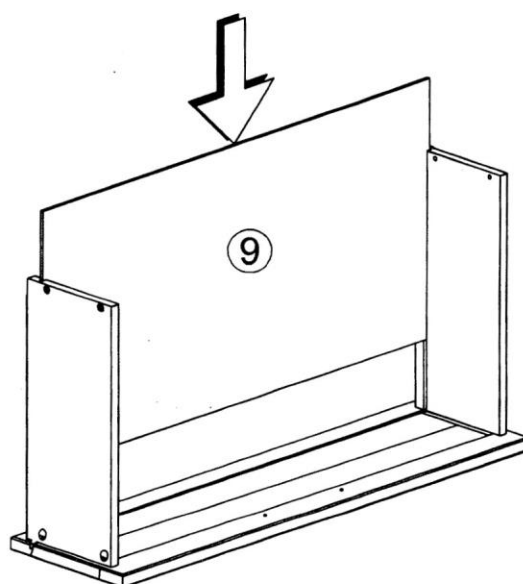


08

(x3)

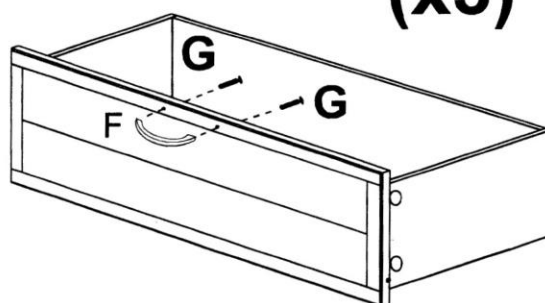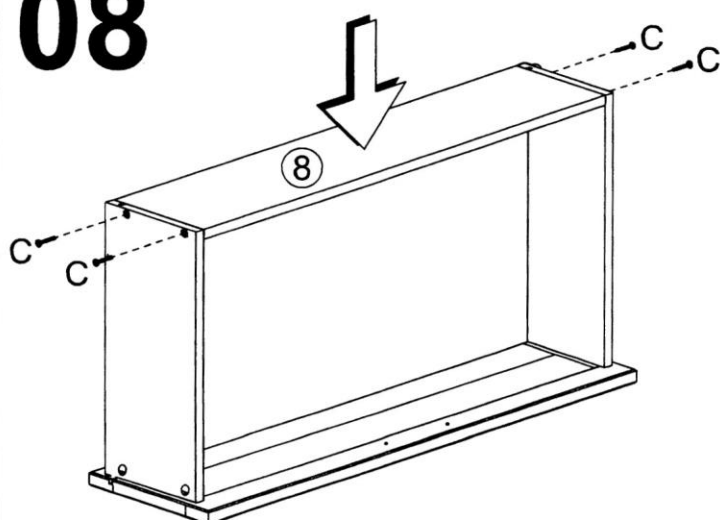


09

(x3)

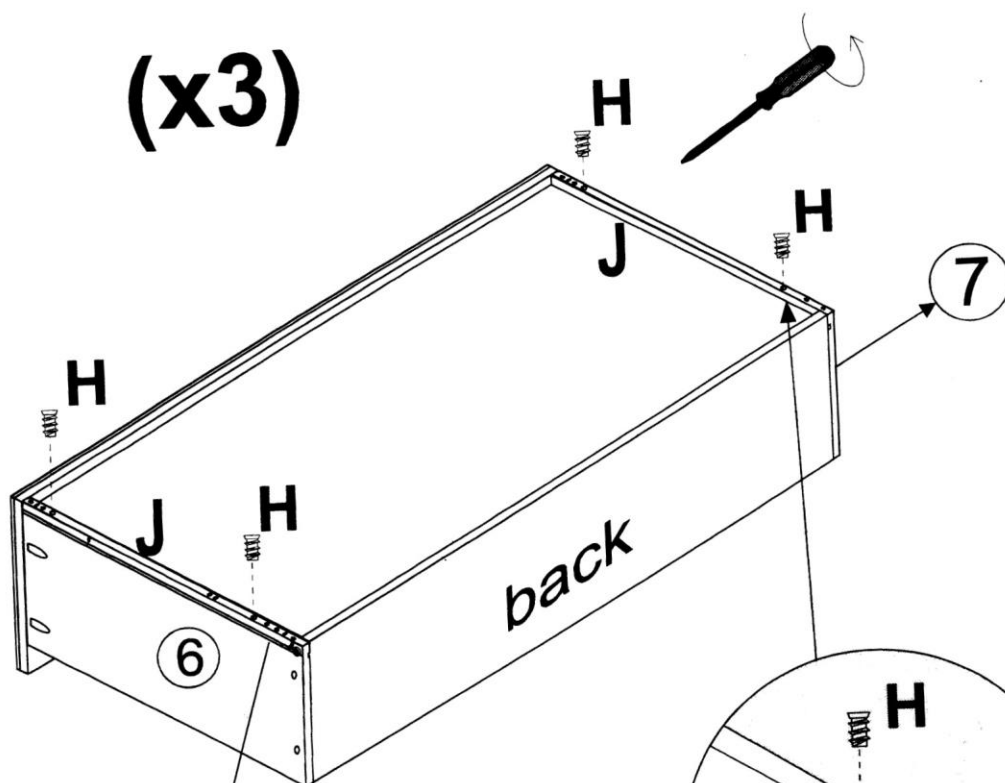


STEP 1

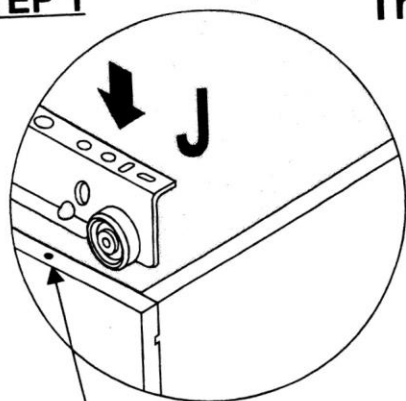


The wheel to the back !

PRE-DRILLED HOLES

STEP 2

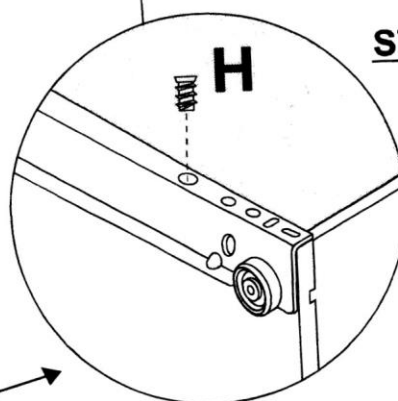

J

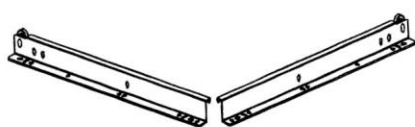

Drawer Runner 350mm

Qty

03



H




6,0 x 10 Screw


Qty

12

10

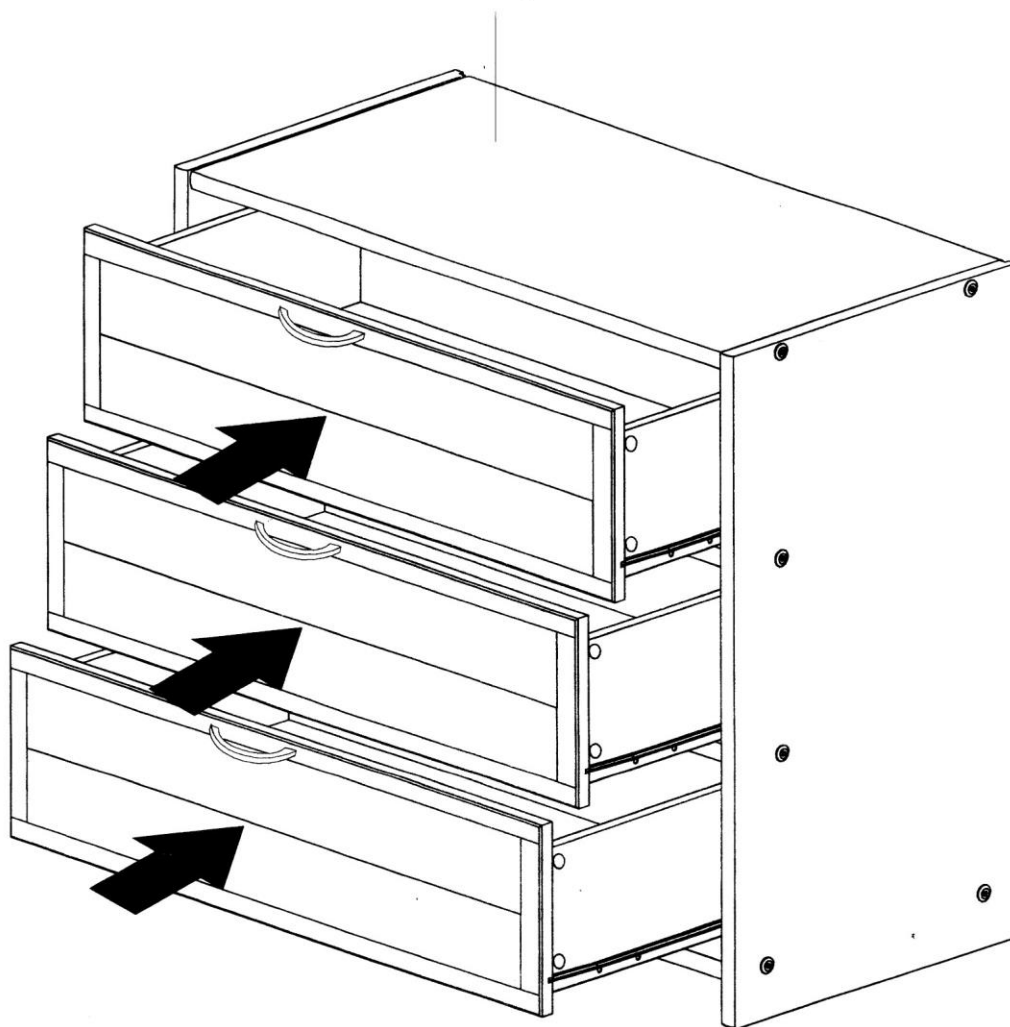

RIGHT STAIR

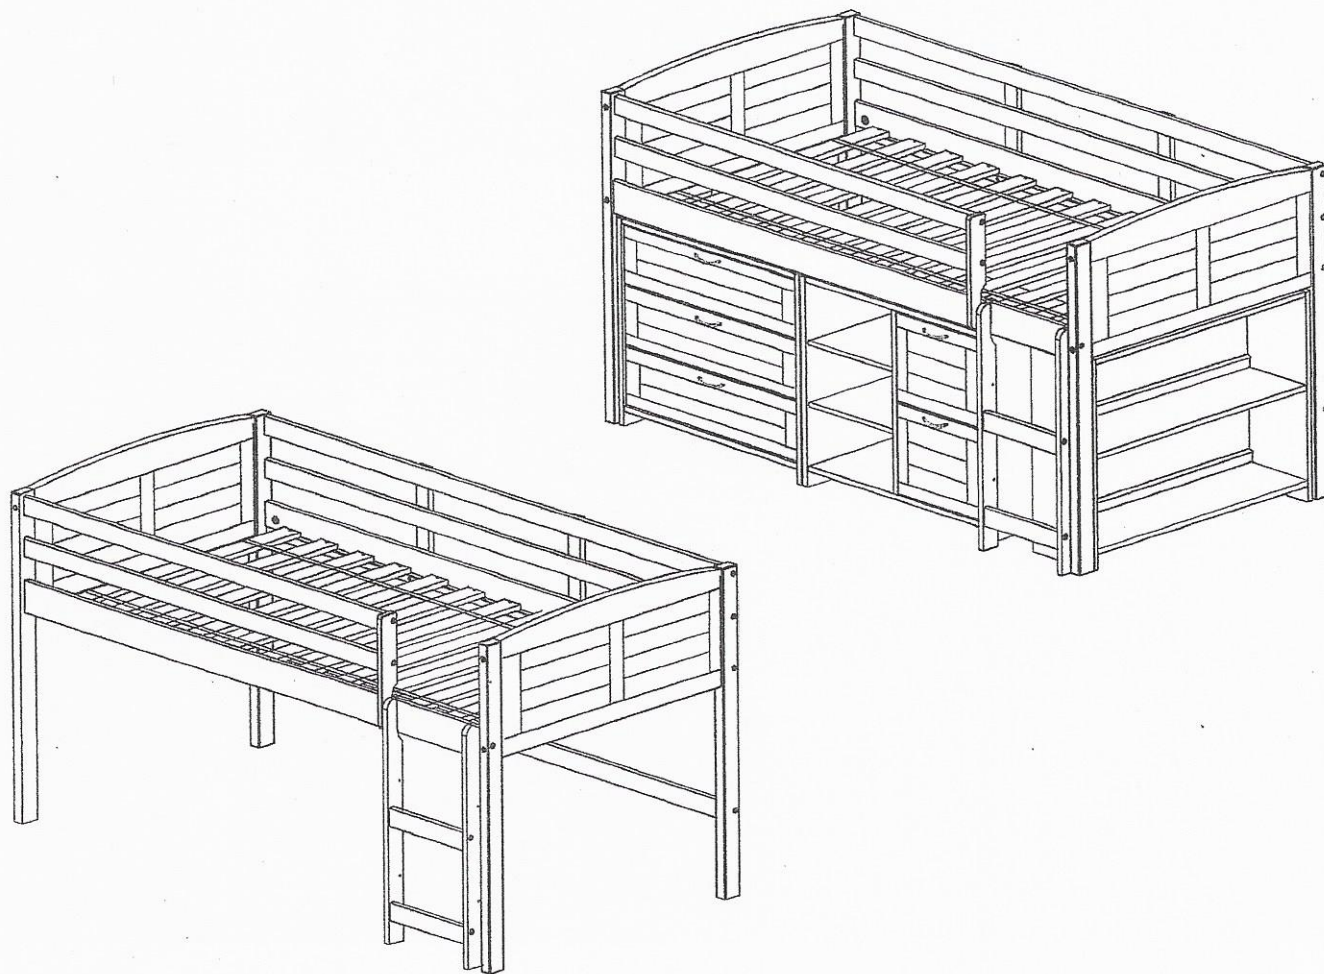

OPTIONAL SETS (THE CASES ARE SOLD SEPARATE)

3 DRAWERS CHEST LOUVER
2 DRAWERS CHEST LOUVER
SMALL BOOKCASE
HEADBOARD BOOKCASE

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"

!
* Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
* Please assemble on a clean soft surface to avoid damage.




Tools Required















IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

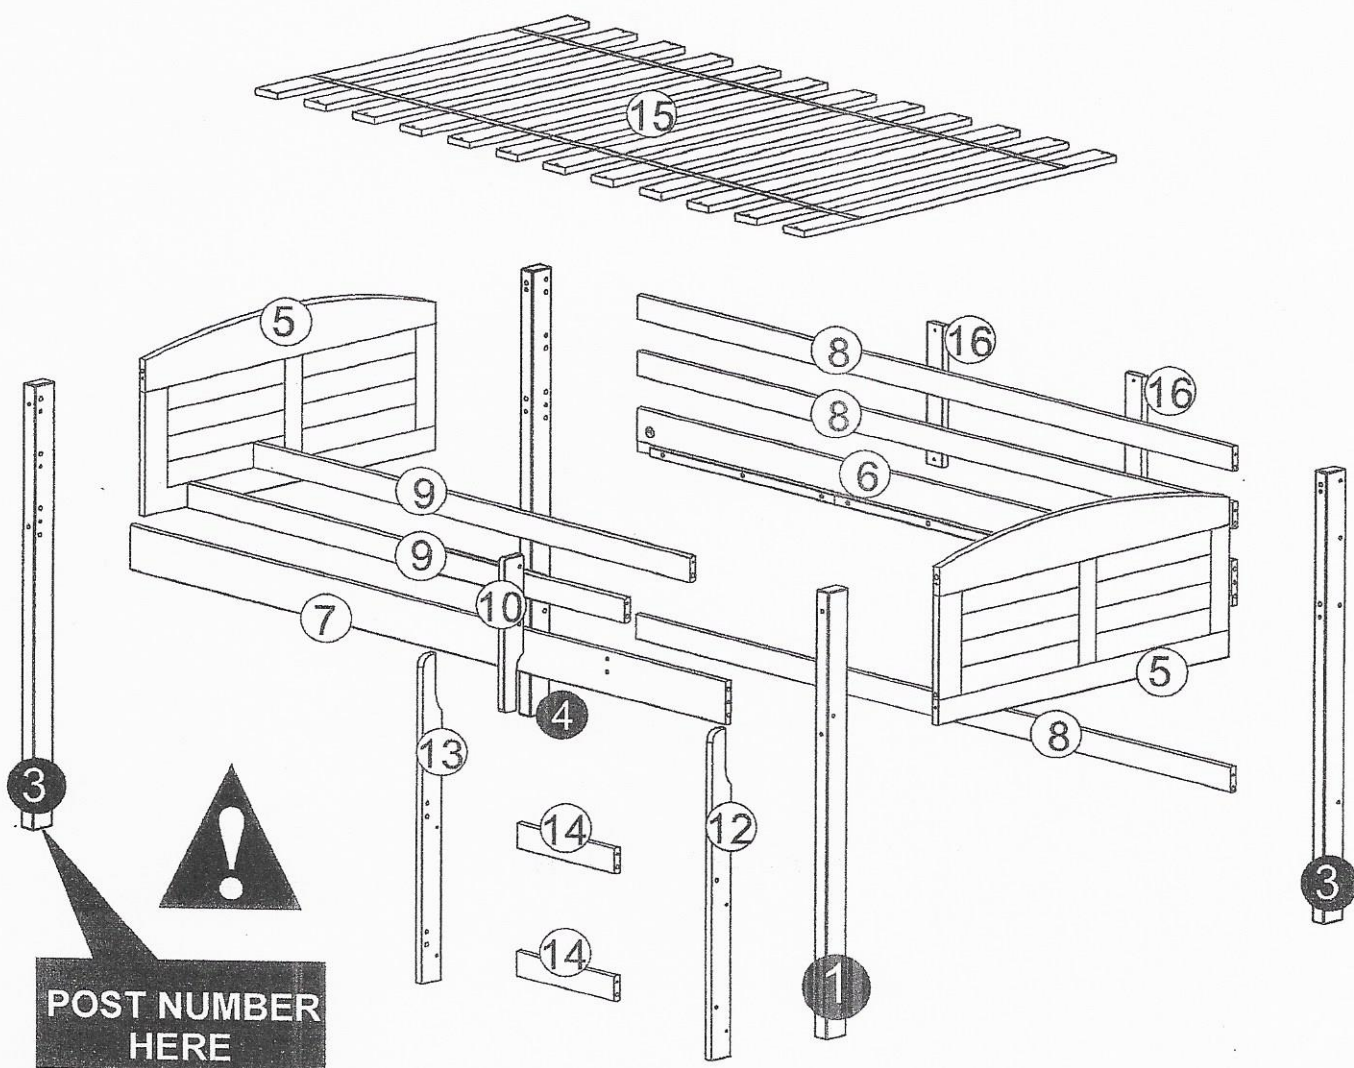Part List - LOW LOFT BED LOUVER



Identifying the Hardware-Identify the hardware using the illustrations below.

A  Qty 04 1/4 x 80 Screw	B  Half Moon Qty 04 1/4" Half Moon	C  Qty 08 7,0 x 80 Screw
D  Qty 08 7,0 x 100 Screw	E  Qty 30 10 x 40 Wood Dowel	F  Qty 08 7,0 x 50 Screw
G  Qty 30 4,0 x 30 Screw	H  Qty 02 4,0 x 40 Screw	I  Qty 06 3,5 x 16 Screw
J  Qty 02 Protector	K  Qty 02 Hook Ladder	L  Qty 01 Hex Screwdriver

02

**SCHUTTER
OUTSIDE ASSEMBLED**

! !


FRONT INSIDE


BACK INSIDE

FRONT INSIDE





FLAT SIDE INTO ASSEMBLED

**POST NUMBER
HERE**

D  **7,0 x100 Screw** **Qty 08**




L  **Hex Screwdriver** **Qty 01**

03

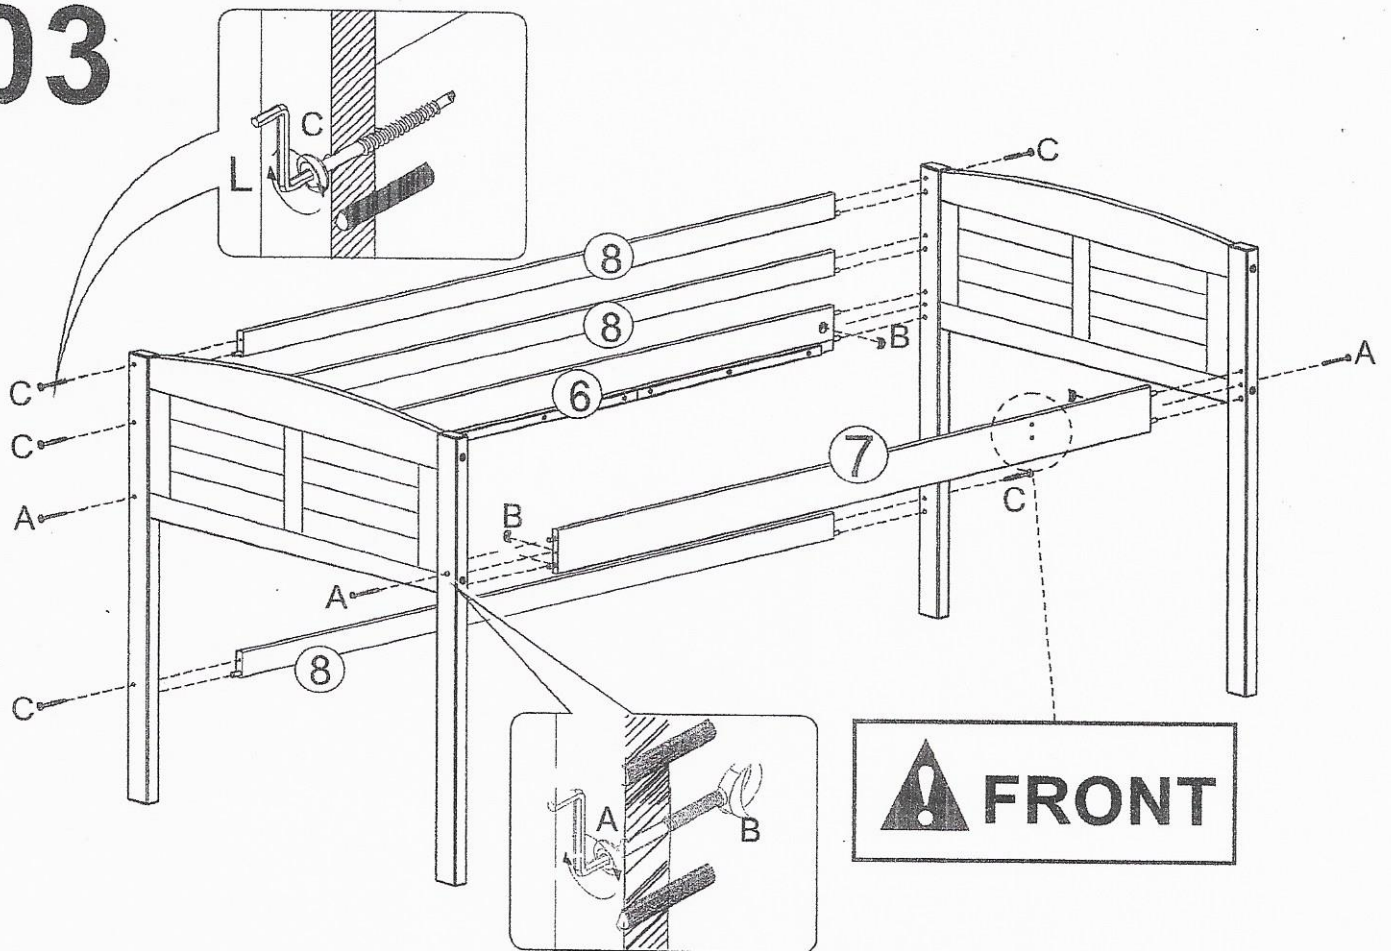
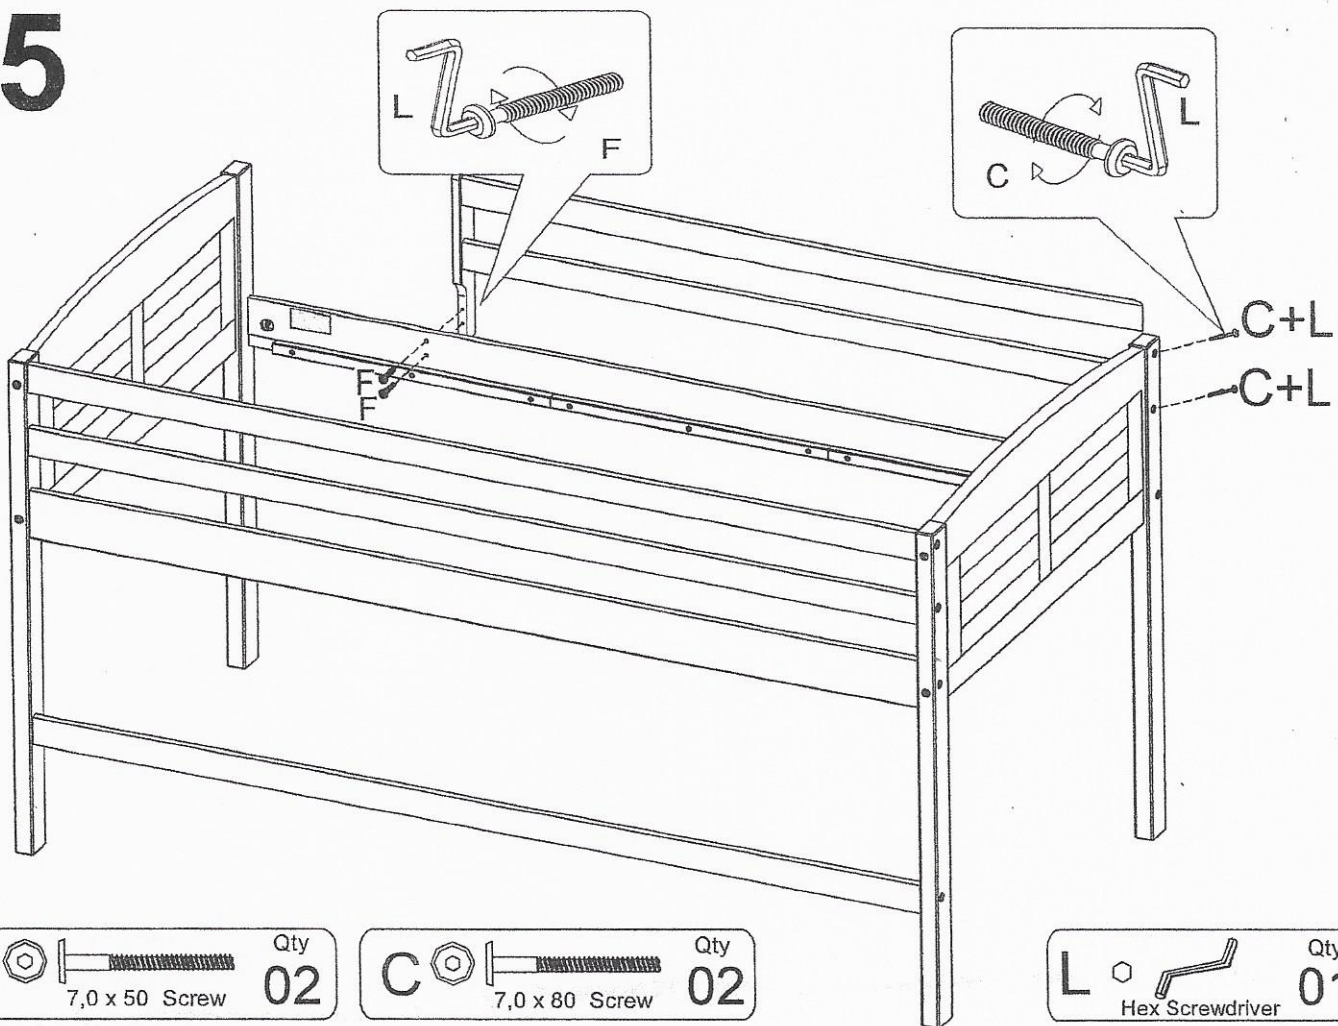


04

FRONT GUARDRAILS

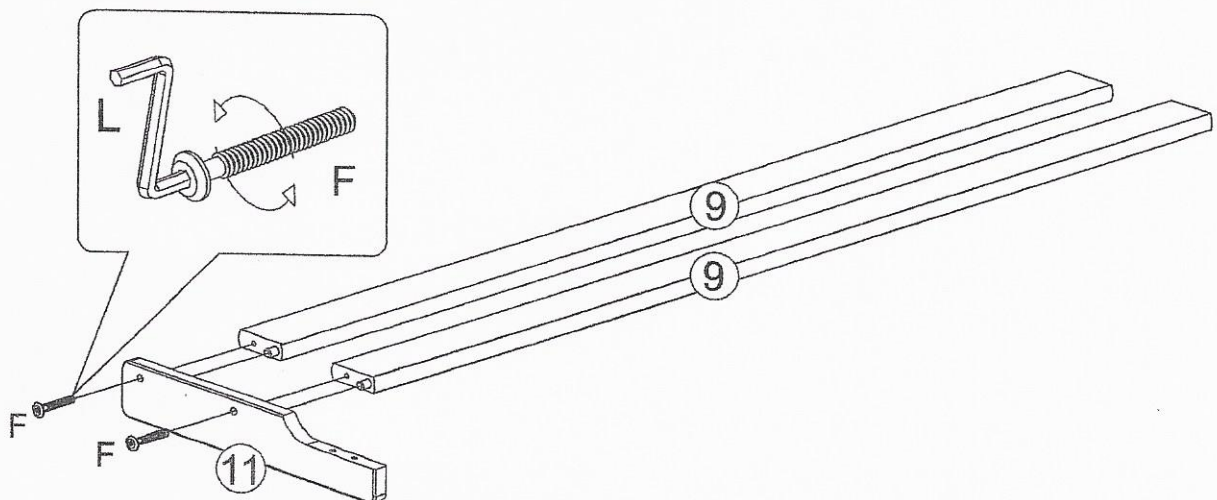


05




7,0 x 50 Screw

02



7.0 x 80 Screw

02


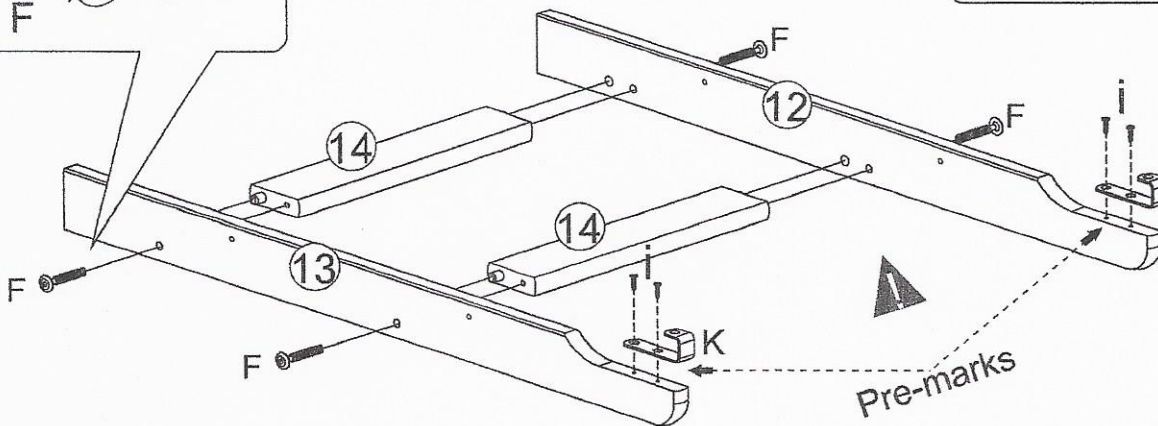
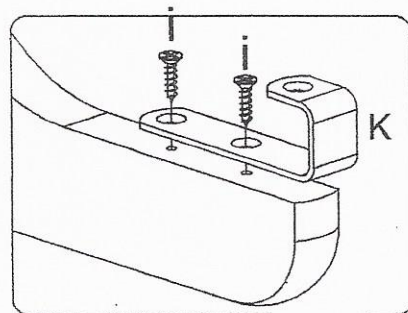
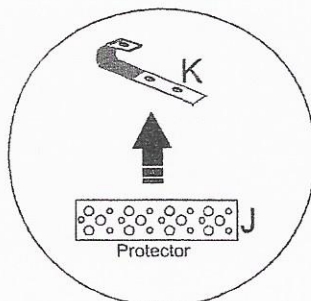
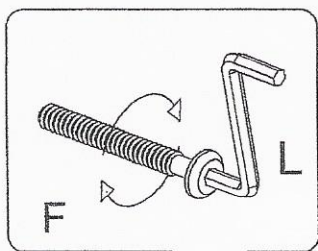


Hex Screw

0


06

LADDER



7.0 x 50 Screw

04



3.5 x 16 S

04



Protector

02



Hook Ladder


02





Hex Screwdriver

0-

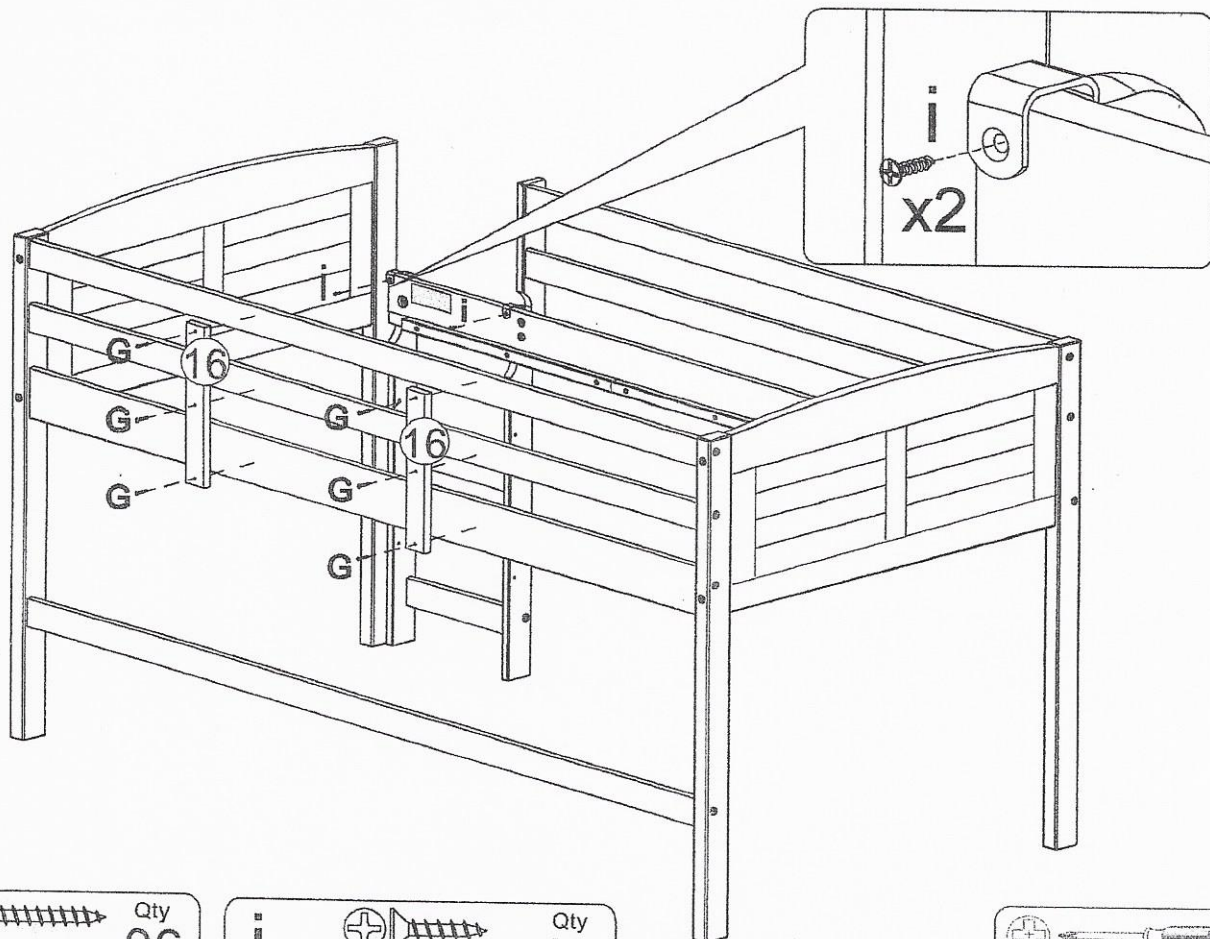07




G  4,0 x 30 Screw Qty **06**

i  3,5 x 16 Screw Qty **02**



08

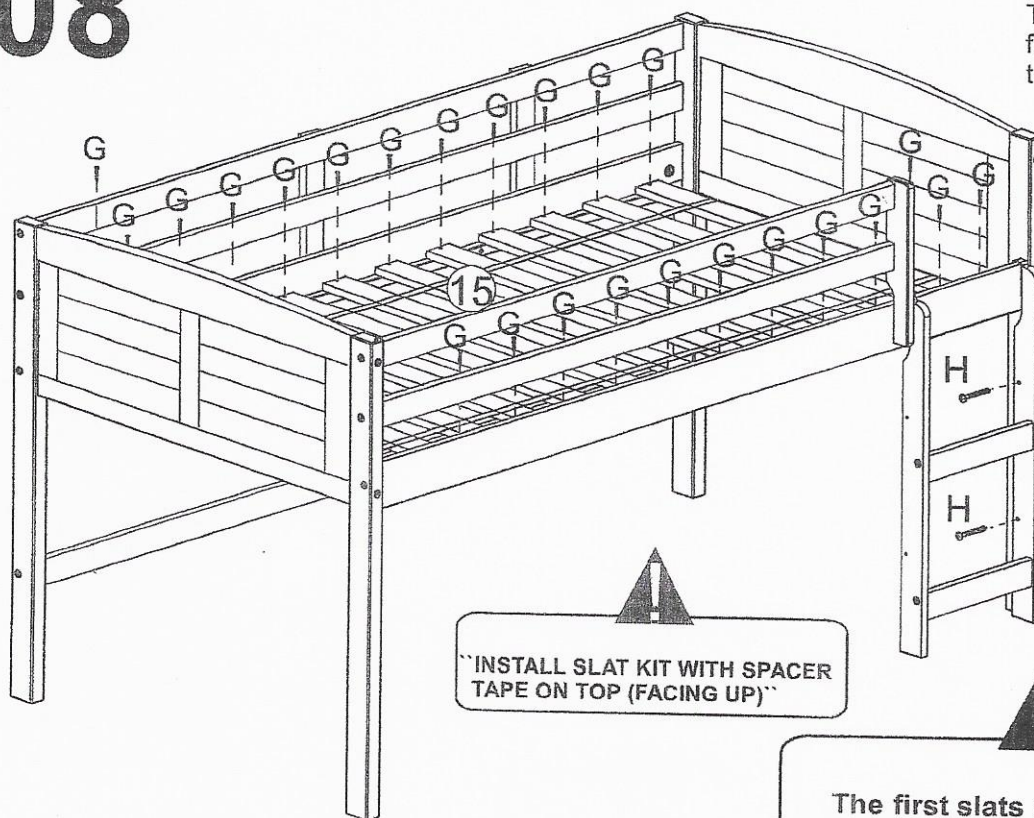


Attention


There must be a least 5" inches from top surface of mattress to top edge or guardrails.


"MATTRESS 8" HIGH LIMITED"

!!
"INSTALL SLAT KIT WITH SPACER TAPE ON TOP (FACING UP)"

!!
The first slats must be fixed at 3" from each headboard end.

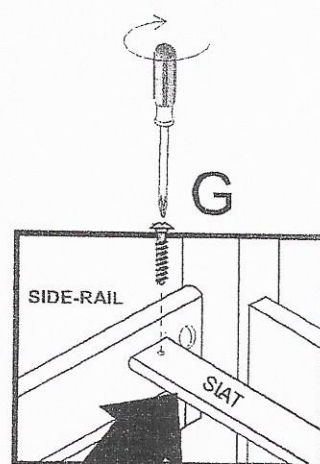


H  4,0 x 40 Screw Qty **02**

G  4,0 x 30 Screw Qty **24**




RIGHT

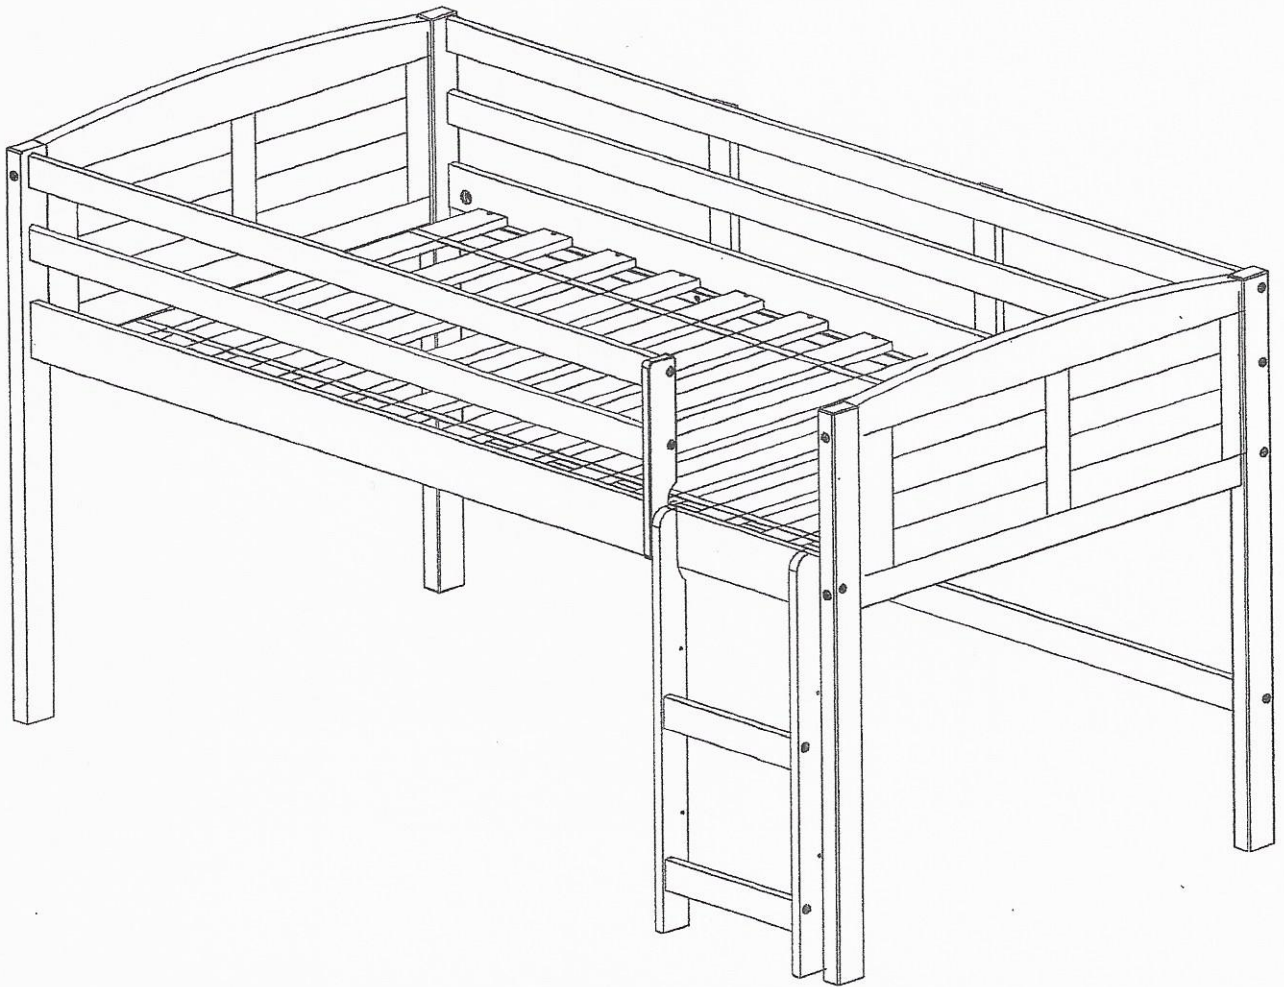


BED ONLY

OPTION COMPONENTS

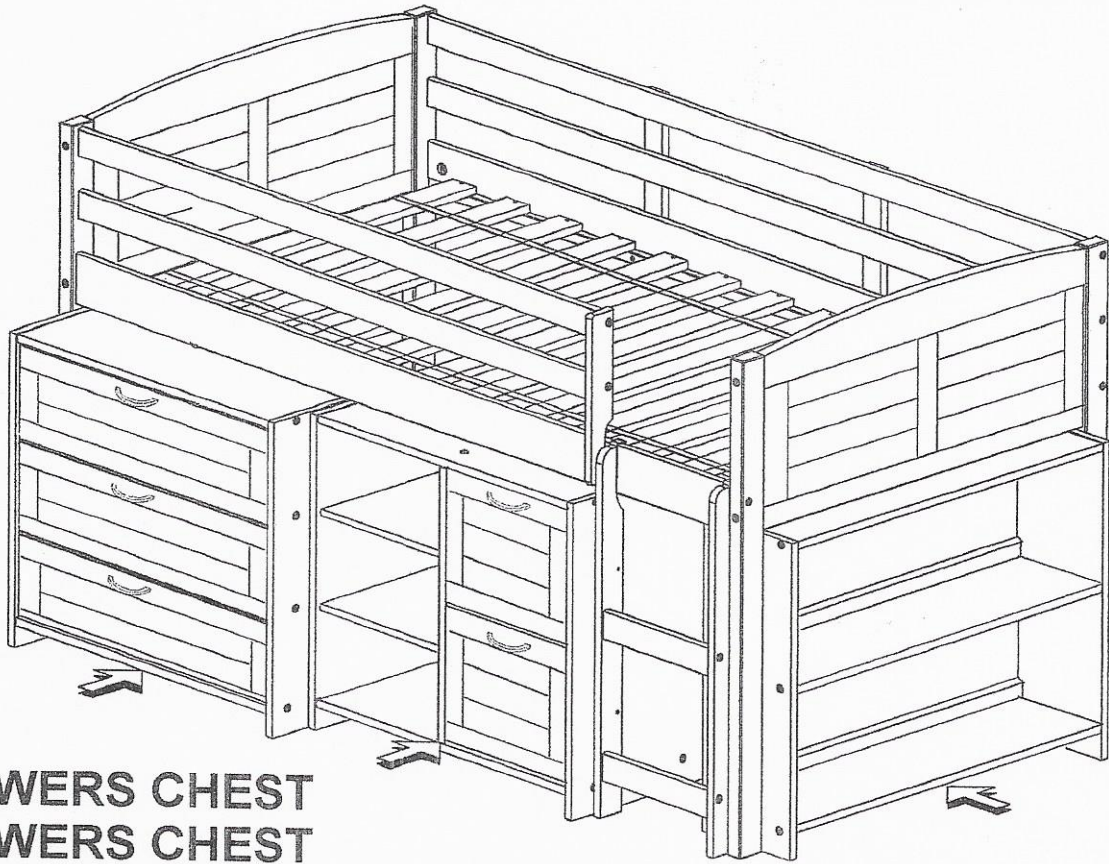

3 DRAWERS CHEST
2 DRAWERS CHEST
HEADBOARD BOOKCASE

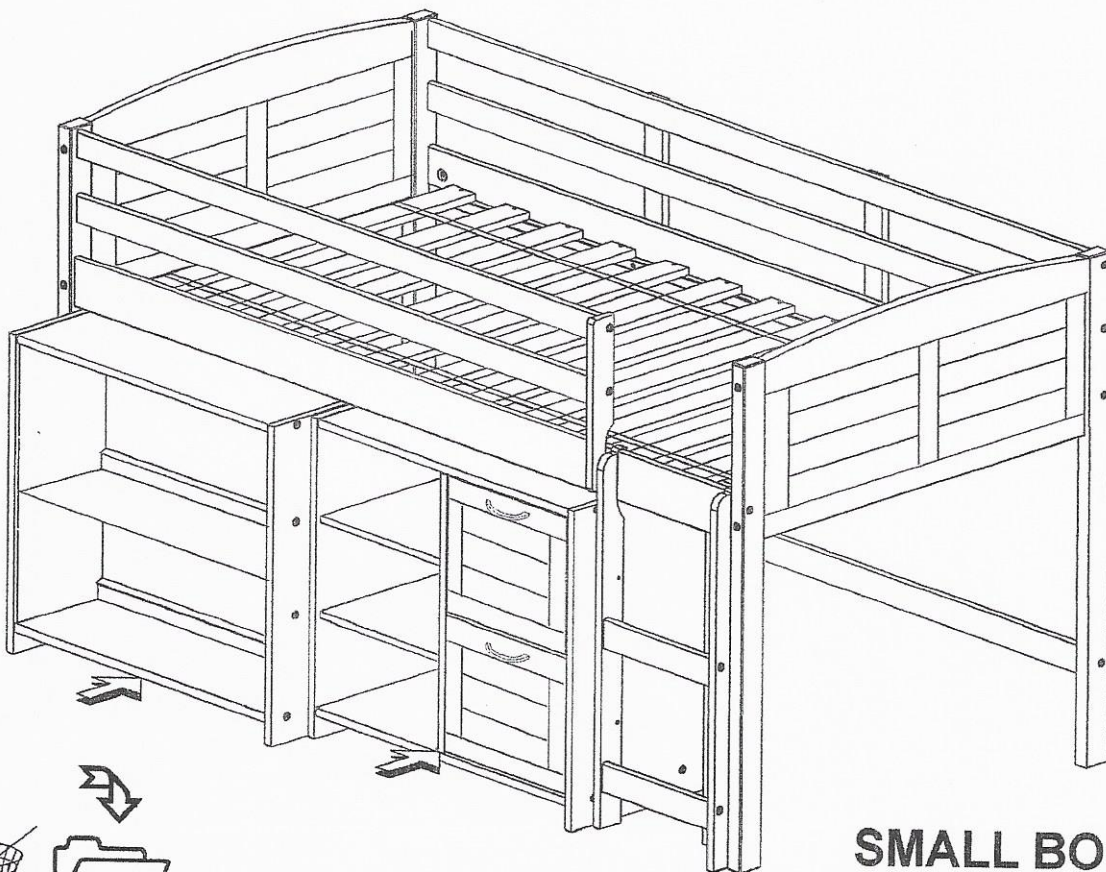

SMALL BOOKCASE
2 DRAWERS CHEST

